


4 Rider

Instruction Manual

Roma

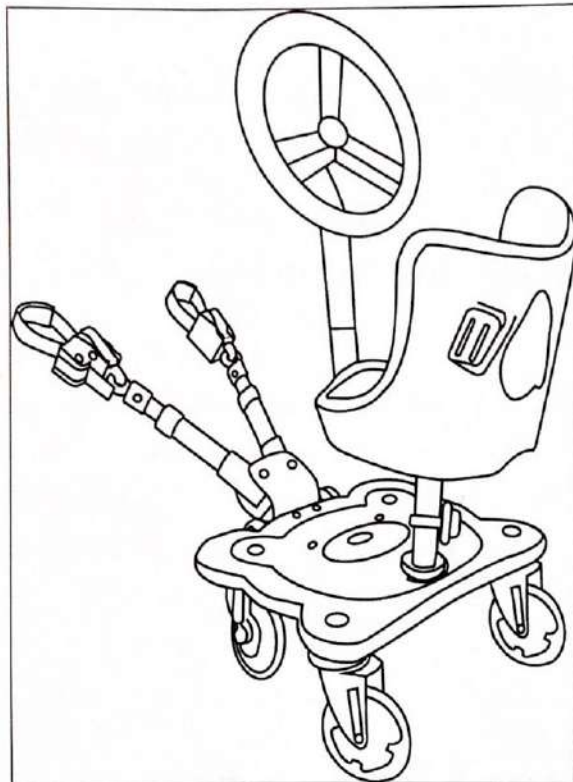

Read all instructions **BEFORE** assembly and **USE** of product.

KEEP INSTRUCTIONS FOR FUTURE USE.

Complies to EN1888:2018

4 Rider

Please read these instructions carefully before use and keep for future reference.


The Rider that you have purchased is a product that enables you to transport your child comfortably outside of your stroller. The 4 Rider is a practical and comfortable product and can be attached to the rear legs of most of prams, strollers and buggies. It's a seated rider as well as a standing platform in one.

Please read this instruction manual carefully before using the Rider. Incorrect use can endanger the safety of your child.

Caution


- The Rider is built for children **aged upwards of 15 months and with a body weight of up to 25 kg.**
- The Rider is developed for prams, strollers and buggies connected at the rear legs. It may not be suitable for some strollers without rear vertical bars or in cases where the brake function is hindered. Please consult your retailer before making your purchase.

Content of the package and features:

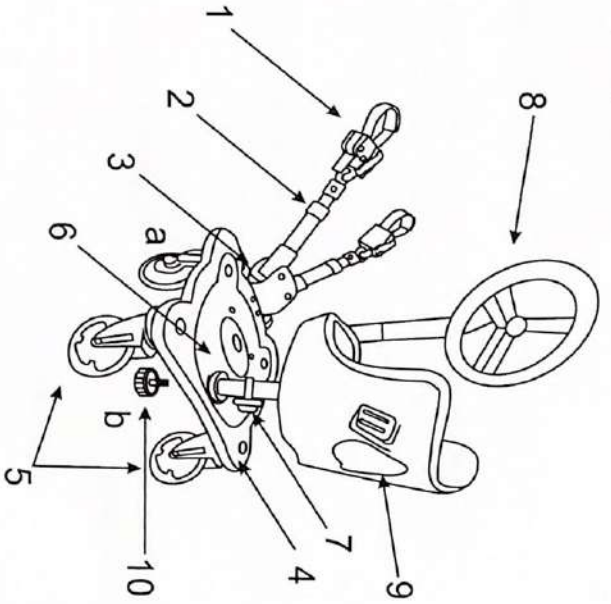


1. Connector.
2. Extension arm.
3. Knob.
4. Platform.
5. Flashing Wheel.
6. Non-slip Sticker.
7. Plastic lid.
8. Handle bar
9. Seat
10. Screw


Assembly instructions

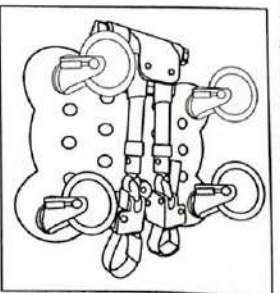


Check the unit when you open the box and make sure all parts are well assembled as illustrated.

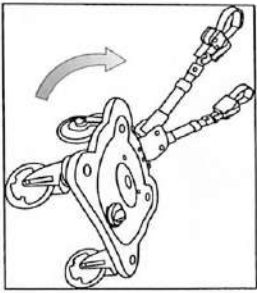


Unfold both arms illustrated.

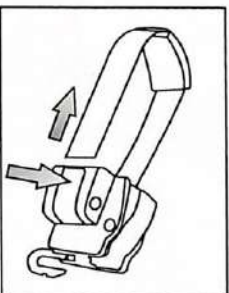

Press the button to pull out the strap.

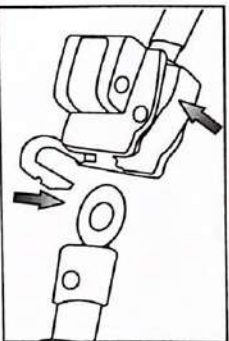


Fasten the lock as illustrated, and make sure it is firmly in place.

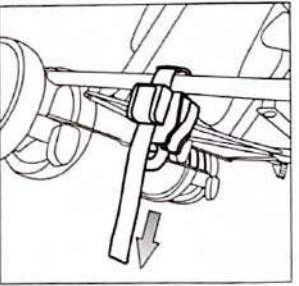


Connect the connector onto both the rear legs. Find suitable placement points for your stroller and tighten it up firmly as illustrated

Make sure it is securely locked.


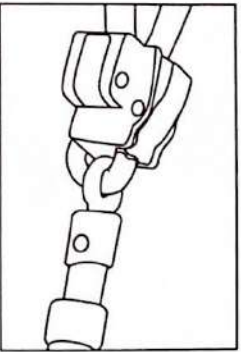


Adjust the distance of both arms to get the best range.

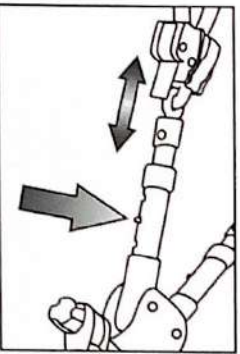


⚠ WARNING


To avoid the unstableness and/or backward tipping, it is essential to adjust the platform to be level to the ground, and adjust the knob correctly to tighten it up securely as illustrated before use.

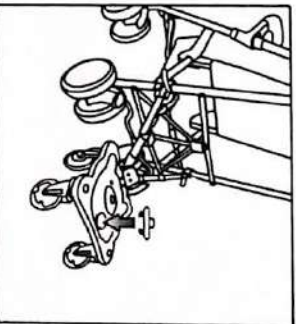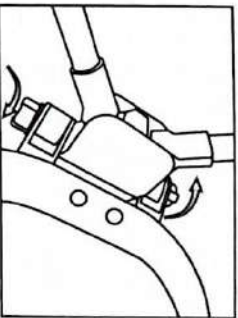

The 4 Rider is ready to be used.

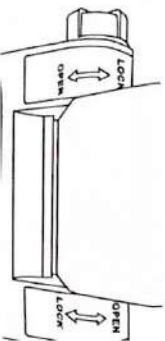

4 Rider is equipped with an adjustable strap that helps to store the unit when not in use. Attach the strap onto the stroller handle bar and hook the unit at the bottom firmly as illustrated. Attention: Storage strap may not be suitable for some strollers. Please consult with the retailer for information.

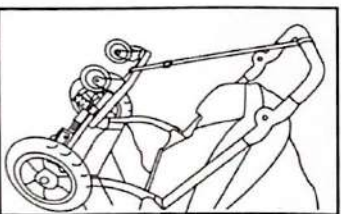

Convert the Rider to a Seated Rider.





Remove the plastic lid from the foot-board. Mount it on the seat post for storage.

Connect the seat to the seat post, insert the seat post to the board, and secure with the screw on the underside of the board.

Please make sure it is securely tightened before use.

Adjust to the desired height of seat and fasten it with screws securely.
The handle bar can be adjustable to two heights.

Your 4 Rider is now ready to use as a seated rider.

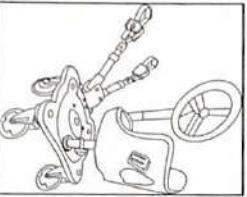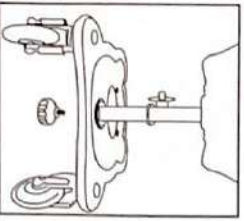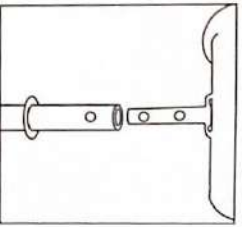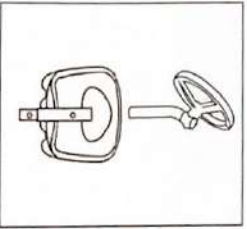

Safety instructions

- Do not use the 4 Rider until your child can walk independently and without help. Children must only be transported on the foot-board in a standing position.
- Allow your child to alight from the Rider before reaching pavement edges, stairs, steep paths, tight corners, as well as when manoeuvring backwards.
- There may be types of pram for which **the 4 Rider is not suitable** because the connector cannot be attached firmly to the frame construction. Consult your retailer before making your purchase.
- Before starting out on each journey, check whether board and pram are correctly connected to one another.
- From time to time, check that all screws and mountings of the 4 Rider are sitting firmly and that all parts of the pram are in good order.
- No alterations must be made to the 4 Rider or pram which result in safety no longer being guaranteed.
- In the event of any possible damage to the device, only original replacement parts of the manufacturer must be used.
- The 4 Rider is not suitable for use on snow or soft surfaces.
- Clean the board and the wheels from time to time with warm soapy water.
- Please keep the plastic packing away from children or dispose of it as there is a risk of suffocation.
- Apart from this, adhere precisely to the instructions of your pram manufacturer.

WARNING

- The 4 Rider may only be used if there is a second child in the pram or if the pushing handles of the pram are held tightly with both hands by an adult.
- The 4 Rider is not a toy. **Never leave your child unattended.**
- The 4 Rider must not be used if you go jogging with the pram.
- The 4 Rider is designed for children **upwards of 15 months and up to a maximum weight of 25 kg**. In order to guarantee the safety and functionality of the device, avoid any overloading and under no circumstances use it for transporting other items.

Roma Prams Ltd

D2 Link Park Weymouth Dorset DT3 4FL. UK

Tel.: +44 1305 853080

Email: hello@romaprams.co.uk

Web: www.romaprams.co.uk