

# Uptown Rider

Instruction Manual

*Roma*



Read all instructions **BEFORE** assembly and **USE** of product.

**KEEP INSTRUCTIONS FOR FUTURE USE.**

**Complies to EN1888:2018**

Please read these instructions carefully before use and keep for future reference.

The Rider that you have purchased is a product that enables you to transport your child comfortably and without fatigue in the pram. The Uptown Rider is a practical and comfortable product and can be attached to the handle of most of prams, strollers and buggies.

Please read this instruction manual carefully before using the Uptown Rider. Incorrect use can endanger the safety of your child.

**Caution**

- The Rider is built for children aged upwards of 15 months and with a body weight of up to 25 kg.

- The Rider is developed for prams, strollers and buggies. It may not be suitable for some baby carriages without applicable placement of the handle. Please consult your specialist dealer before making your purchase.

**Assembly Instructions**

Remove all components from the carton and check that they are complete as per the parts list. Please contact your dealer in case of any missing parts.

Part list		
 <b>Chassis * 1</b> (With M6 Screw & Nut)	 <b>seat * 1</b>	 <b>steering wheel * 1</b> (With M6 Screw & Nut)
 <b>Connector * 1</b>	 <b>Fender*2</b>	 <b>Tool*1</b> M4 screw(for Fender)*2
 <b>Back Wheel *2</b>		

**Assembly:**


1. press button(1) and lift the handle up till it's fully extended.




2. Pull the front part of chassis upward till it clicks to unfold the Uptown Rider.




3. Tighten the Fender onto the wheel housing by using the 2 M4 screws. Please make sure it is securely tightened before in use.

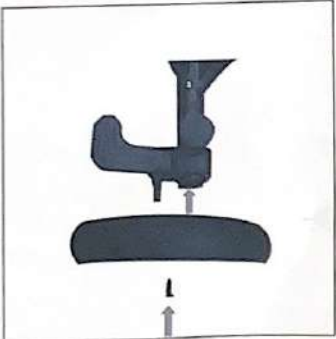


4. Install and removal of the rear wheel: Insert the wheel pin to the rear wheel housing until it clicks to install the wheel, gently pull it to ensure it's firmly installed. Make sure both back wheels are assembled correctly before use. Pull up the pin on the back axle to remove the wheel from the rear housing.

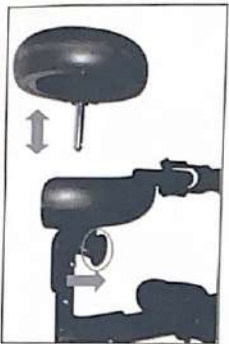


5. Seat assembly: Connect the seat with seat post and fasten them with the M6 screw & M6 Nut. Please make sure it is securely tightened before use. Adjust it to the desired height of seat and fastened it with screws and nut securely.

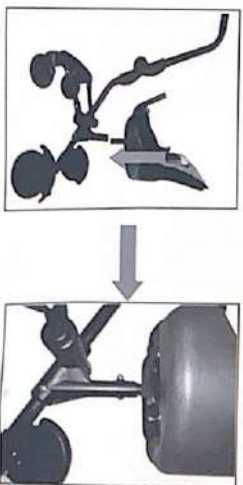


6. Assembly of the steering-wheel handle: Connect the handle with handle post and fasten with the M6 screw and M6 nut. Please make sure it is securely tightened before use.

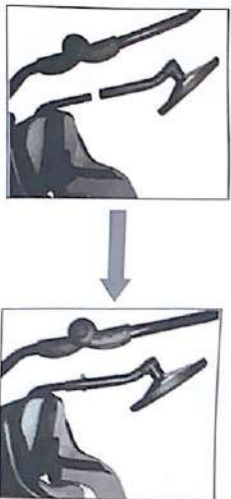

Connecting the rider to the baby carriage  
1. Connect the connector onto one side of your stroller. Find suitable placement for your stroller and tighten it up firmly as illustrated.

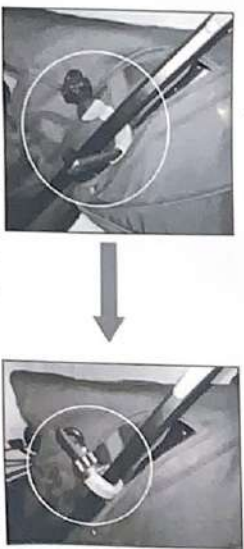


2. Adjust the Uptown Rider level to the ground and adjust the connector to tighten it up as illustrated.

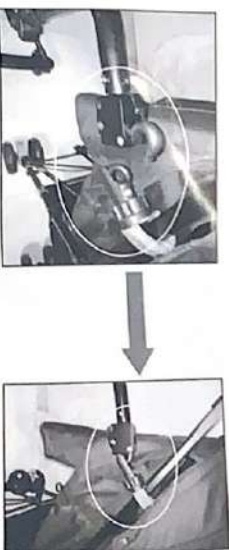

3. Uptown Rider is ready for use.





Step down the brake pedal to engage the brake. Lift the pedal up to release.

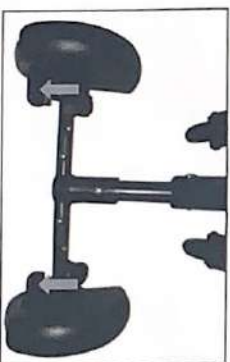


III: Disconnecting the rider from the baby carriage.


1. Press the button to button underneath A and pull outward to remove the bumper.

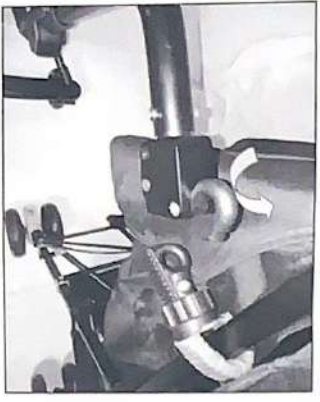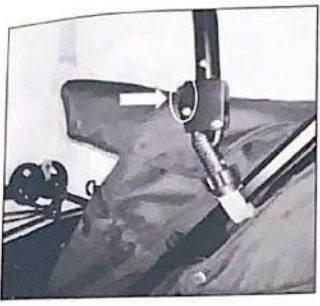

2. Press the button (2) and push the front wheel downwards to fold the Uptown Rider.

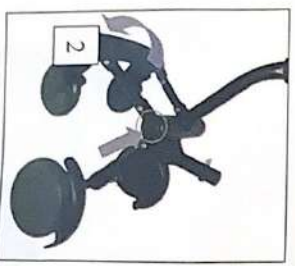

3. Press the main button (1) and push the handle downwards to fold the Uptown Rider completely.

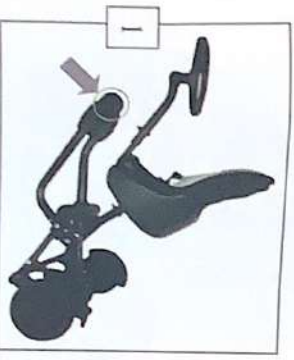

### Safety instructions

- Do not use the Uptown Rider until your child can sit independently and without help. Children must only be transported on this product in a seated position.
- The connector of the Uptown Rider is only allowed on the rear (pushing-side) frame of the pram.
- Allow your child to alight before reaching pavement edges, stairs, steep paths, light corners, as well as when manoeuvring backwards.
- There may be certain types of prams for which the Uptown Rider is **not suitable** because the connector cannot be attached firmly to the frame construction. Consult your specialist dealer before making your purchase.
- Before starting out on each journey, check whether the Uptown Rider is correctly connected to the pram.
- From time to time, check that all screws and mountings of this product are sitting firmly and that all parts of the pram are secured and safe to use.
- Do not make any alterations to the Uptown Rider, to avoid compromising its safety.
- In the event of any possible damage to the device, only original replacement parts of the manufacturer must be used.
- The Uptown Rider is not suitable for use on snow or soft surfaces.
- Clean the all parts and the wheels from time to time with warm soapy water.
- Please keep the packing away from children as there is a risk of suffocation.
- Keep the instruction manual carefully for any possible subsequent users.
- Apart from the above, adhere precisely to the instructions of your pram manufacturer.

### WARNING:

- The use of this product is admissible only if there is one child sitting in the pram or buggy with a second child on the Uptown Rider and if the push-bar handles of the pram are held tightly with both hands by an adult.
- The Uptown Rider is not a toy. **Never leave your child unattended.**
- The Uptown Rider must not be used if you go jogging or skating with the pram.
- The Uptown Rider is designed for children **over 15 months age and up to a maximum weight of 25 kg.**
- In order to guarantee the safety and functionality of the device, avoid any overloading and under no circumstances use it for transporting other items.