



MB450 LUXE

2-in-1
Travel System

GB Instruction Manual

ES Manual de instrucciones



IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

Welcome to the familiee

Your trust in our product means the world to us, and we're thrilled to be a part of your parenting journey. Our team has worked tirelessly to ensure that the MB450 provides comfort, safety, and style for you and your little one. We're confident it will exceed your expectations. Should you have any questions or require assistance in the future, please don't hesitate to reach out. Thank you for choosing My Babiie; we wish you and your family countless wonderful journeys ahead.

Get to know your MB450 LUXE Travel System

Scan the QR code below on your camera app to be linked off to our page to get all the information you need for using your Travel System. From setting it up to how to fold it down, it's all there!



Warranty

We provide a 1 year warranty against manufacturing or material defects. The warranty period is effective from the day of purchase and applicable to the UK and Ireland. If you made your purchase from an authorised retailer, please return your product to them.

If you bought your product via our website; mybabiie.com, please contact our Customer Service team via email (info@mybabiie.com). We are happy to refund any product if you change your mind about your purchase (if purchased from our website, mybabiie.com.) As long as you tell us within 30 days of receiving your goods. They must be returned in an unused condition, in the original, undamaged packaging and complete with all original parts and accessories. Proof of purchase is required.

What is not covered by the Guarantee?

- Failure to follow My Babiie user guide and maintenance instructions.
- Damage caused by non domestic use
- General wear and tear, for example: worn wheels, damaged rain covers, worn/tear fabric.
- Deliberate damage, misuse or neglect.
- Product which has been modified, undergone an unauthorised repair or used a non approved spare part.
- Cosmetic damage.
- Parts subject to normal wear and tear, foam handles, rubber elements of wheels, signs of fabric wear.
- Loss incurred as a result of not being able to use a product whilst waiting for a spare part or repair.

A repair service is available for any item that sustains accidental damage at any point during its lifespan. If the damages are not covered by our guarantee, we will provide a quote for the repair costs on an individual basis. If you find yourself in need of spare parts that are not covered by the warranty, you can purchase each spare part on our website (subject to availability).

To read more about your guarantee, please visit mybabiie.com/guarantee.

Our guarantee is provided by My Babiie Retail Ltd, Suite 188, Stockiie Business Centre, Unit A, St. James Business Park, Henwood Ind. Estate, Henwood, Ashford TN24 8DH
Your statutory rights are not affected by the guarantee.

Registering your Warranty

To register your warranty please visit www.mybabiie.com/warranties

Registering for your product warranty allows you to claim repairs or replacements if your product develops a fault. It will also help us contact you in the event of a product issue that you may need to be made aware of.

 
Problems or Questions

If you have any questions about your product then please drop us an email at info@mybabiie.com and we will get back to to you as soon as possible. Alternatively, you can chat to us on our Live Support Chat on our website mybabiie.com or contact us via our social media channels.

Setting up

1 Open the frame




Open the folding lock and pull up the handle bar.

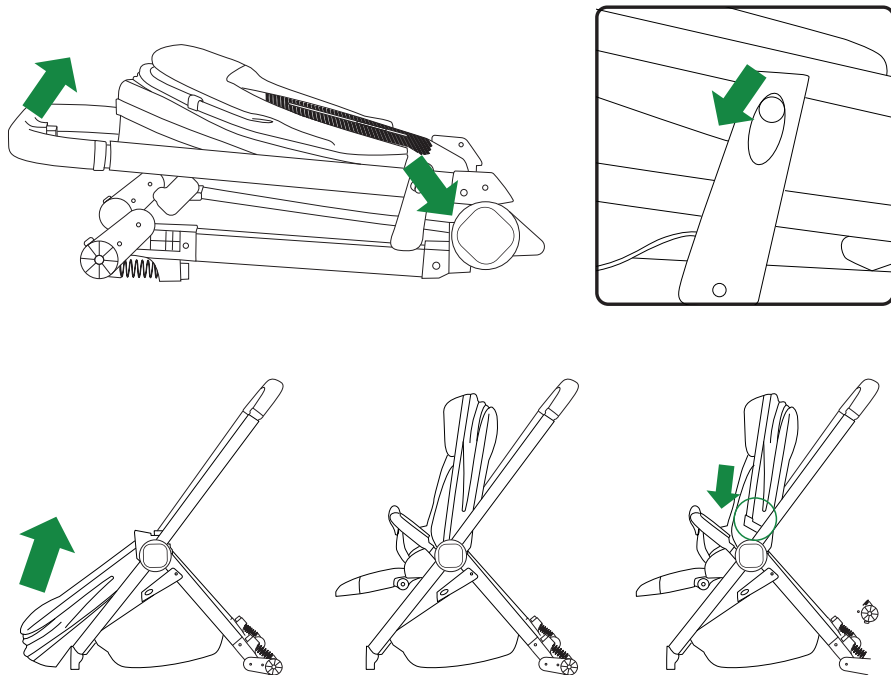

Setting up



2 Assemble the front wheels

   - Insert the vertical shaft of the front wheel into the plastic hole on the wheel unit until you hear a “click,” indicating it is securely locked. Repeat the same process for the other front wheel.
- Slide the directional button up or down to lock or unlock the wheels. The front wheels can rotate 360°.
- To disassemble, press the metal release pins (as shown in the picture) while simultaneously pulling out the wheel by hand.

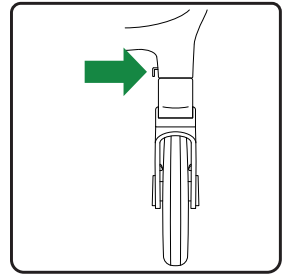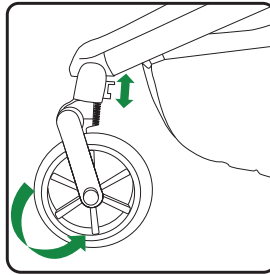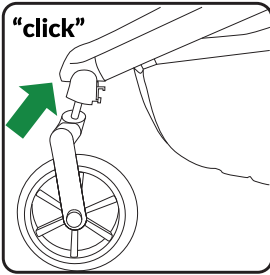

3 Assemble the rear wheels

  
- Insert the horizontal shaft of the rear wheel into the plastic hole on the wheel unit until you hear a “click,” confirming it is securely locked. Repeat the process for the other rear wheel.
- To disassemble, press the metal release pins (as shown in the picture) while simultaneously pulling the wheel out by hand.

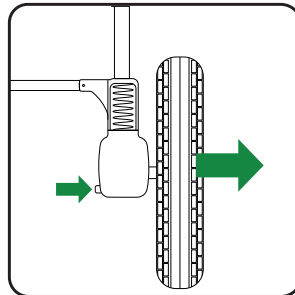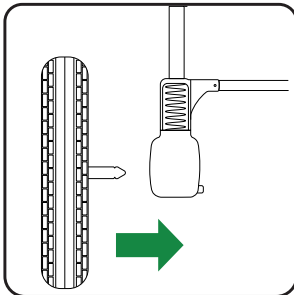

Setting up





4 Adjust the suspension

 Turn the plastic button down or up to adjust the degree of hardness for suspension, to be more hard or more soft.

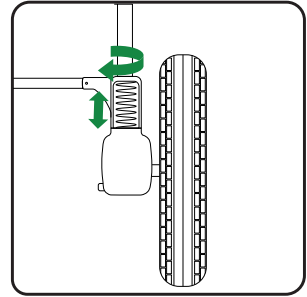

5 Front bumper assembly & disassembly

    
Insert the front bumper into the slots on both sides and ensure it is securely fixed. To disassemble, press the quick-release buttons on both sides and pull the bumper out. The front bumper can be rotated to the opposite side for easier access when placing or removing the child.

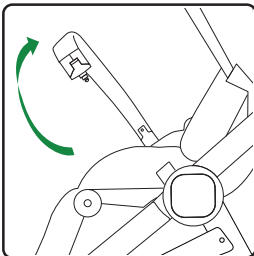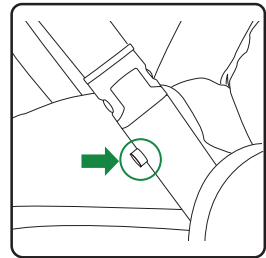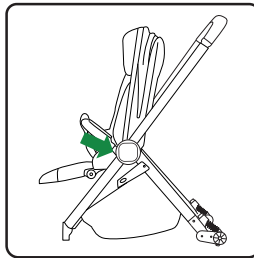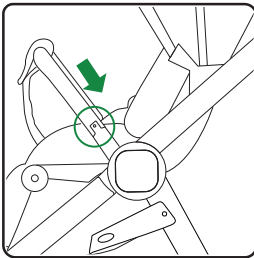

Setting up




6 Adjust the footrest

 Press the adjustment buttons on both sides to adjust the position of the footrest.

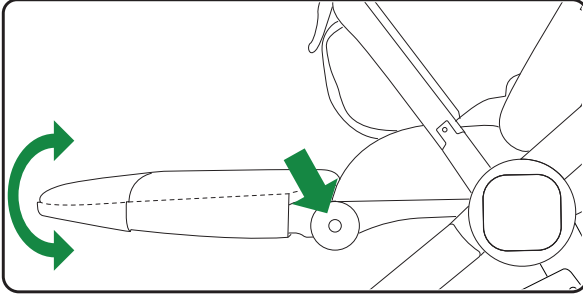

7 Seat adjustment

  
 
Press the unlock button and lift the seat to remove it. The seat can be reinstalled to face the parent - follow the same steps in reverse to change back to world facing.

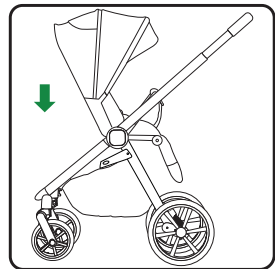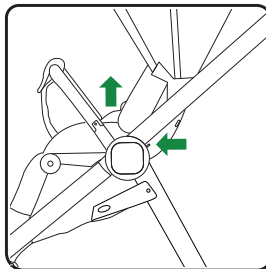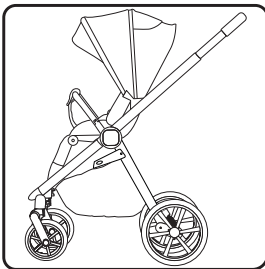

Setting up




8 Backrest angle adjustment

  Pull the adjustment handle to set the backrest to one of three available angles.

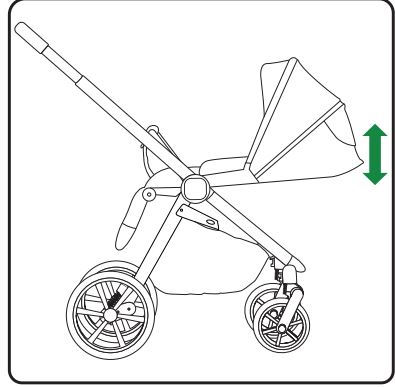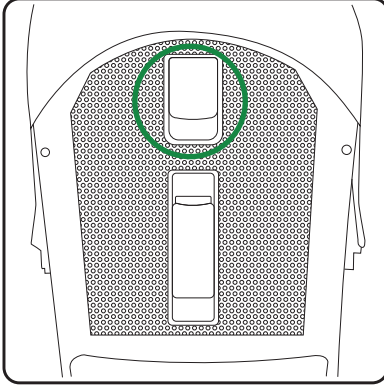

9 Adjustment of the canopy height

   
Press down the adjustment button on the backrest to adjust the height of the canopy. Open or close the zipper to extend or fold the canopy.

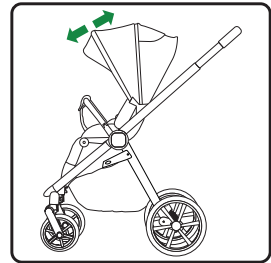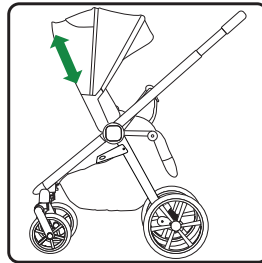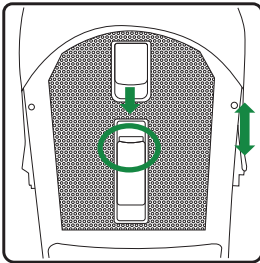

Setting up

10 Telescopic handle

 Press the single handed telescopic button to adjust the height of the handle bar.





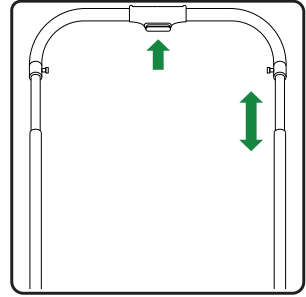


11 Folding the stroller

Adjust the handle bar to be the lowest position, adjust the canopy height to the lowest position, and pull up the angle adjustable button of the backrest to fold the backrest forward.


Turn the handle bar forward.

     Pull up the carrying handle and close the folding lock to finish folding.

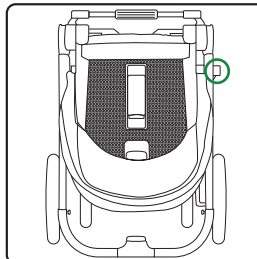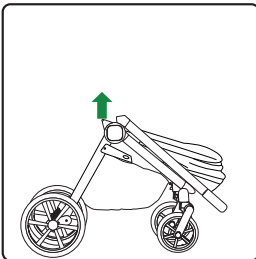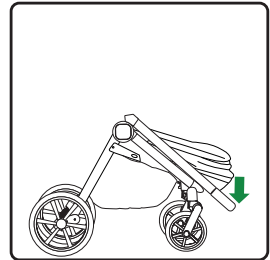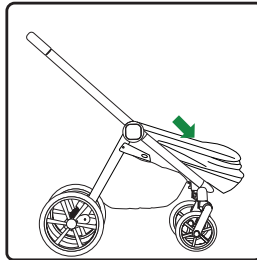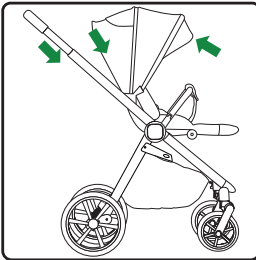


Safety belt usage

 
- 1** Insert part **b1** into part **a1**, insert part **b2** into part **a2**, a “click” will indicate that they are attached correctly.

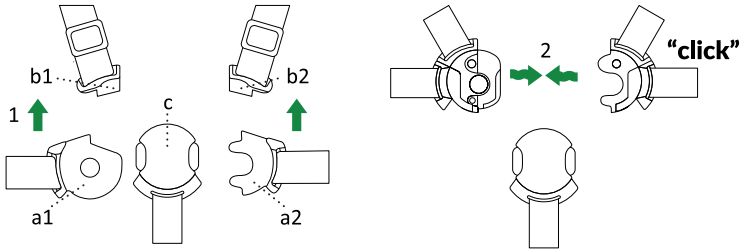

 
- 2** Place part **a2** on top of part **a1**, place the buckle component “**c**”, as shown in the image above on top of the combined parts **a1+a2**. A click will indicate they are attached correctly

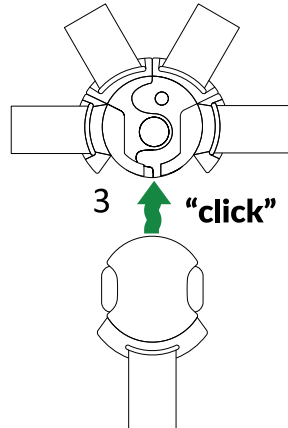

 - 3** To release the buckle, press the buttons on either side.

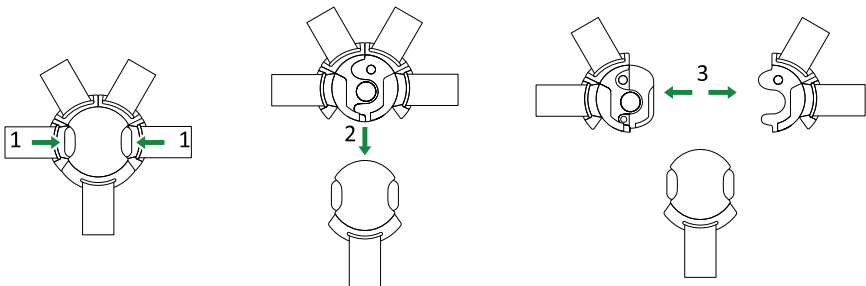

Safety belt adjustment

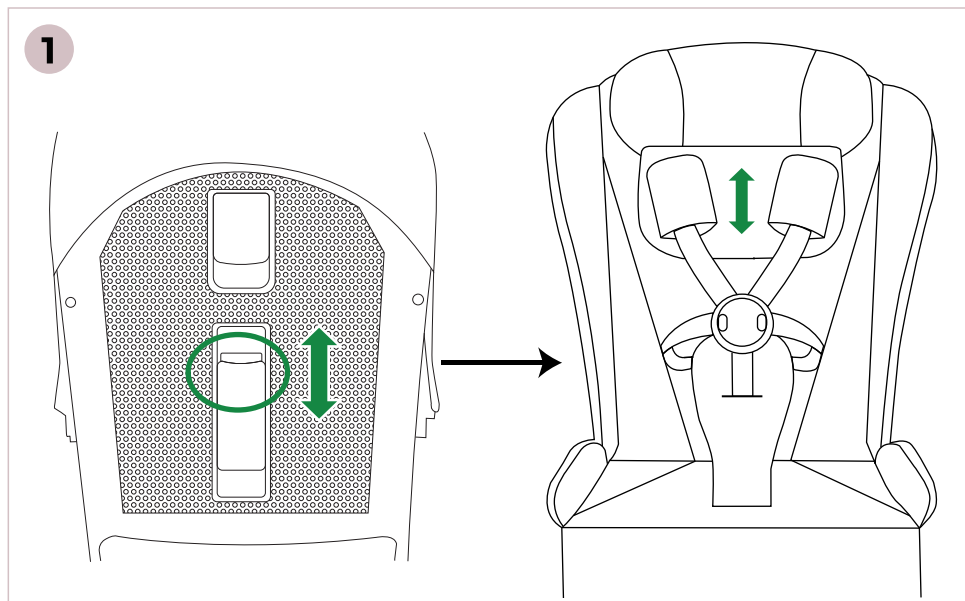 

Assemble the carrycot

 
 
- !** The product can be used ONLY for babies who cannot sit or stand unaided (Under 6 months approx. Never use the products for babies who may raise itself by its hands or knees) Must NOT use the product when the baby is able to sit unaided. Recommended time for continuous use is 1 hour.

1 Assemble the carrycot




Remove the bedding and mattress.

Squeeze the metal tensioners on the bottom plate in the direction of the arrows (see pic a) until they lock into the holders - you should hear a "click" sound.

The carrycot canopy can be extended or folded as shown in pic b.



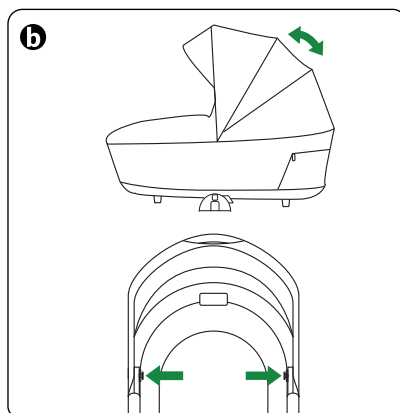
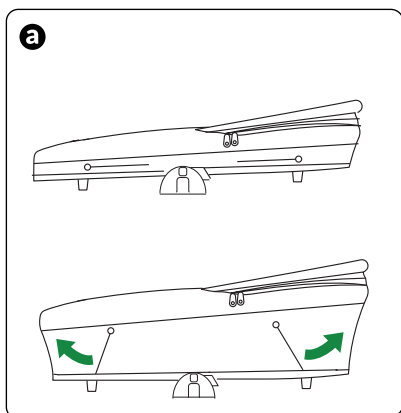


   - ## 2
- Lower the carrycot adapters as indicated by the arrows. Ensure they click into place to confirm they are securely locked. To disassemble, press the quick-release buttons on the adapters and pull them upward.

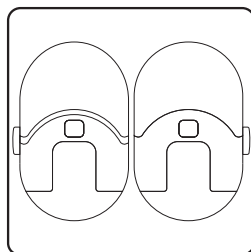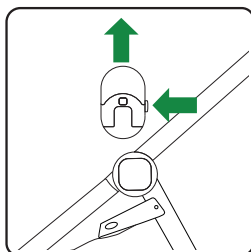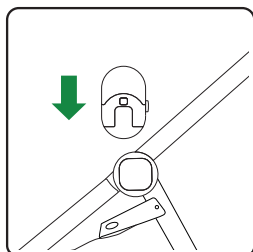



Assemble the carrycot

    - 3** Place the carrycot straight down onto the frame until you hear a “click” on both sides (see pic a). When assembling, ensure the baby faces the parent, as shown in pic b. To remove the carrycot (pics 14a–14b), press the memory buttons on both sides—one at a time if needed—then lift the carrycot off the frame.

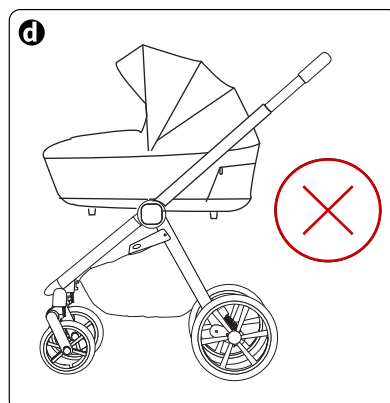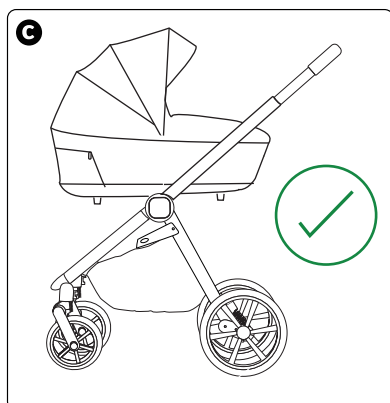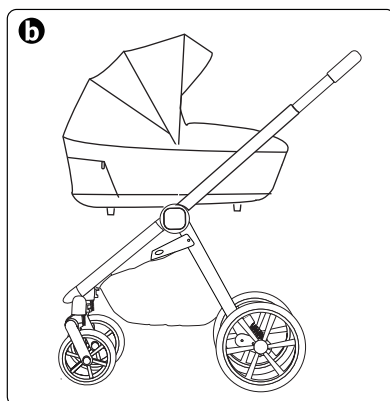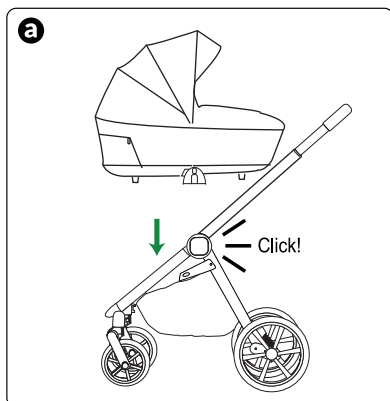

4 Remove the carrycot

  Press the memory buttons on both sides - one at a time if needed - then lift the carrycot to remove it.

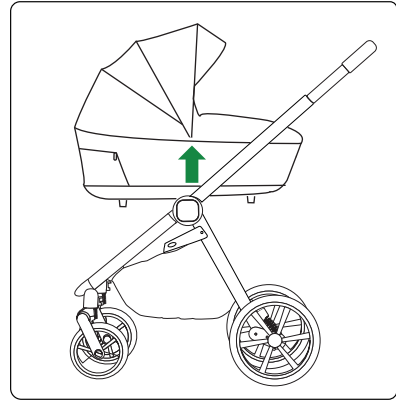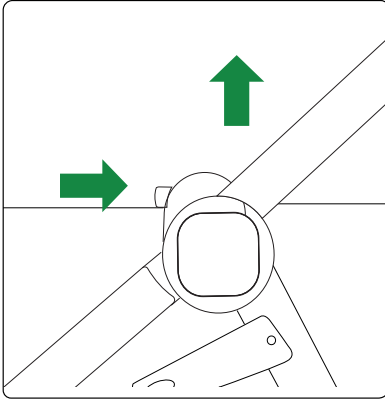

NOTE! The pram body is designed for children up to 6 months old weighing up to 9 kg, who cannot sit, kneel or crawl by themselves.

Stop using the stroller body if your child starts sitting kneeling or walking by itself.

WARNING: Do not use an additional mattress of thickness of more than 15mm. The pram body canopy has 4-step adjustment. In order to adjust it, press simultaneously the buttons located at the base of the carrying handle and adjust to the desire position.

 
 
 
NOTE! The external canopy can not be used as the carrying handle.

NOTE! Make sure that the carrying handle is locked in the correct position before you move the pram body.


Use with Car Seats (Optional)

- 1** Attach the car seat adapters to the frame until you hear a soft “click,” indicating they are securely locked.

Align the car seat with the adapters, then gently push it down until you hear another “click,” confirming the car seat is properly fixed to the frame.

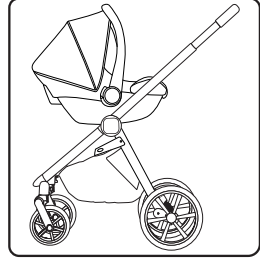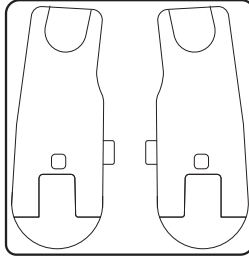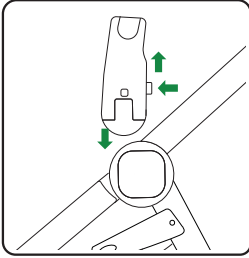


 - 2** To remove the car seat from the frame simply press down on the release buttons on either side of the car seat whilst lifting the car seat up from the frame.

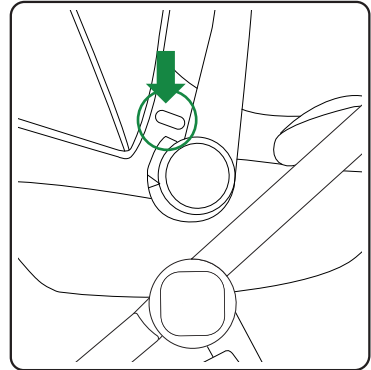


Accessories

 
1 Footmuff

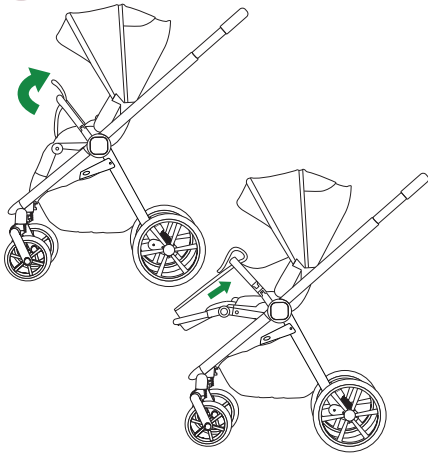


2 Raincover

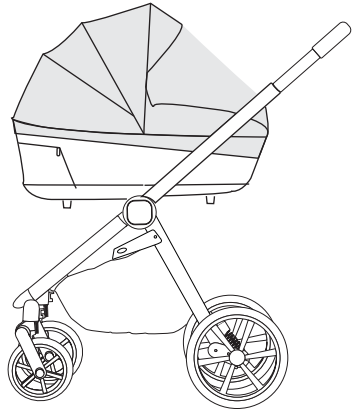 

3 Phone Holder

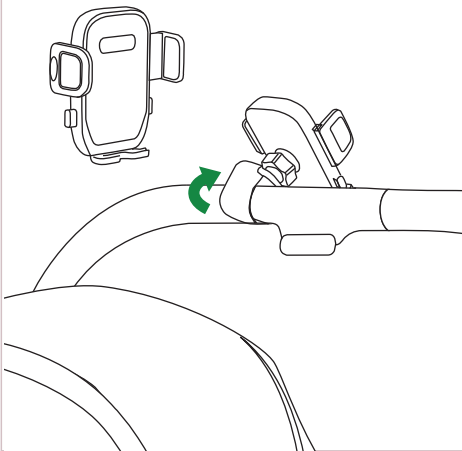 

4 Bag

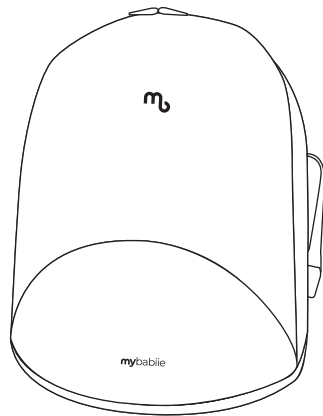 

Pushchair warnings

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

Please read these instructions carefully before use and keep them for later reference.

Remove all packaging and non-permanent labels and dispose of safely before using this product. The safety of your child could be put at risk if you do not follow these instructions.

This stroller is designed for 1 child from 0 months up to a weight of 22 kg/36 months.

WARNING: Never leave your child unattended.

WARNING: Uneven or excessive loading of items on or in the stroller may cause the product to tip and may cause injury.

WARNING: Maximum intended weight within the shopping basket is 3kg.

WARNING: Ensure that all the locking devices are engaged before use.

WARNING: To avoid injury ensure that your child is kept away when unfolding and folding this stroller.

WARNING: Do not let your child play with this stroller.

WARNING: Always use the restraint system.

WARNING: Check that the pram body or seat attachment devices are correctly engaged before use.

WARNING: Do not put hot drinks or liquids in the cup holder.

WARNING: This product is not suitable for running or skating.

WARNING: Do not insert any additional mattresses into the stroller.

WARNING: Accessories which are not approved by the manufacturer shall not be used.

WARNING: This pushchair has been designed for one child and shall be used for the transport for only one child!

WARNING: Always use the crotch strap in combination with the waist belt.

WARNING: This stroller does not replace a cot or a bed. Should your child need to sleep, then it should be placed in a suitable cot or bed.

WARNING: Only replacement parts supplied or recommended by My Babiie shall be used.

WARNING: Any load attached to the handle and on the back of the backrest and on the sides of the stroller will affect the stability of the stroller.

WARNING: The parking device shall be engaged when placing and removing the children.

WARNING: The carrycot should not be used as soon as the child is able to sit by themselves, roll over or can push itself up on its hands and knees. Maximum weight of the child: 9kg

WARNING: Use the seat in the most reclined position for newborn children until they can support their own head

EN 1888-1 & 2: 2018+A1: 2022 approved

EN 1466:2023 approved

Carrycot warnings

- The product is only suitable for one (1) child.
- The product shall not be used as soon as the child is able to sit by himself, roll over and can push itself up on its hands and knees.
- Maximum weight of the child: 9kg.
- Do not add additional mattress.
- This product is compatible with the chassis of the stroller.
- Only use on a firm, horizontal level and dry surface.
- Do not let other children play unattended near the carry cot.
- Do not use if any part of the carry cot is broken, torn or missing.
- Do not leave flexible carrying handles inside the carry cot
- Never leave your child unattended.
- Only use original replacement parts. It may be unsafe to use substitutes.
- Be aware of the risks presented by an open fire and other heat sources such as electrical heaters, gas flames etc. especially if they are in the immediate vicinity of the carry cot.
- Only use the mattress supplied with the carry cot. Please check on a regular basis the carrying handle and the base including all feet for wear and damage of any kind.
- Never use the carry cot on a stand.
- Ensure that your child's head is never at a lower level than it's body when placed inside the carry cot.
- All carrying handles shall be left out of the pram body during use.

EN 1466:2023

Care and maintenance

- Please check on a regular basis that the brakes, wheels, latches, connecting elements, belt systems and seams are properly functional.
- Do not expose the stroller to strong sunshine.
- Sponge clean only.
- After use in rain or snow, the wheels should be lubricated and the stroller dried to prevent rust.
- Care for, clean and check this stroller regularly.
- Do not use accessories that have not been approved by the manufacturer.

 
 
 
 
 
Your child's safety is your responsibility

If you have a problem with this product or require replacement parts, please visit www.mybabiie.com/support

Register your product at: www.mybabiie.com/warranties




1 Abra el marco

Abra el cierre plegable y levante el manillar.

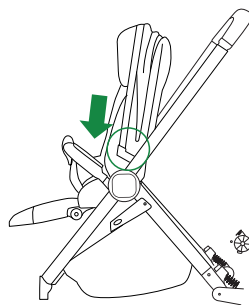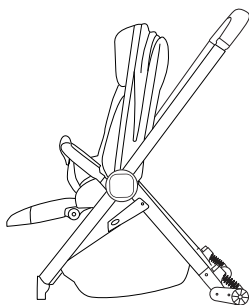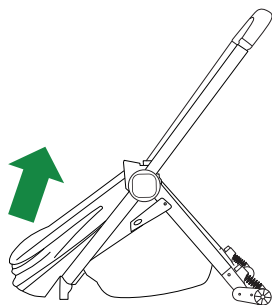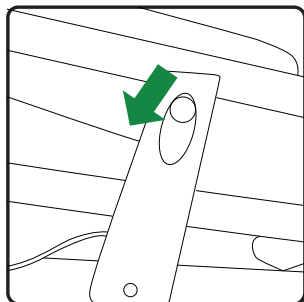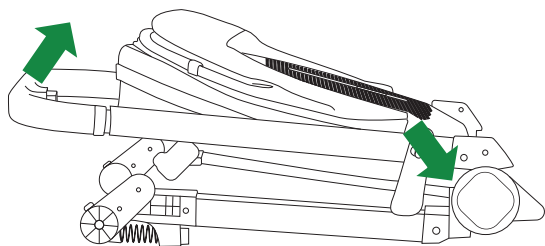



2 Ensamble las ruedas delanteras

   - Inserte el eje vertical de la rueda delantera en el orificio de plástico de la unidad de ruedas hasta que oiga un "clic", lo que indica que está bien bloqueada. Repita el mismo proceso con la otra rueda delantera.
- Deslice la hebilla direccional hacia arriba o hacia abajo para bloquear o desbloquear las ruedas. Las ruedas delanteras pueden girar 360°.
- Para desmontarlas, presione los pasadores metálicos de liberación (como se muestra en la imagen) mientras extrae la rueda con la mano.

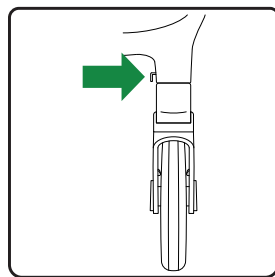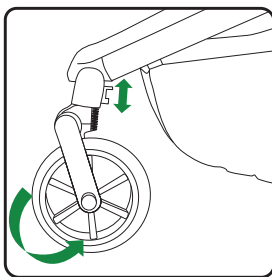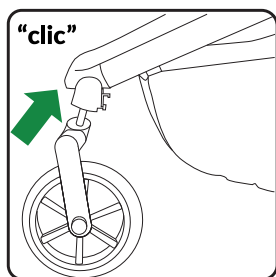


3 Ensamble las ruedas traseras

  - Inserte el eje horizontal de la rueda trasera en el orificio de plástico de la unidad de rueda hasta que oiga un clic que confirme que está bien bloqueada. Repita el proceso con la otra rueda trasera.
- Para desmontarla, presione los pasadores metálicos de liberación (como se muestra en la imagen) mientras extrae la rueda con la mano.

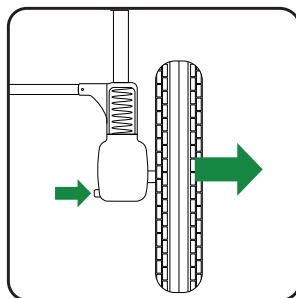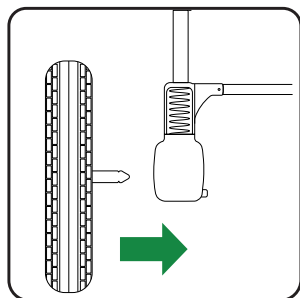





4 Ajuste de la suspensión

 Gire el botón de plástico hacia abajo o hacia arriba para ajustar el grado de dureza de la suspensión, para que sea más dura o más blanda.

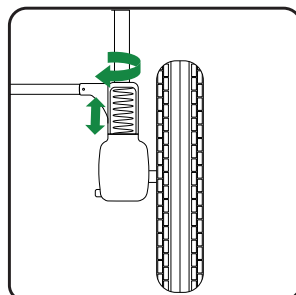


5 Montaje y desmontaje del parachoques delantero

    Inserte el parachoques delantero en las ranuras laterales y asegúrese de que esté bien fijado. Para desmontarlo, presione los botones de liberación rápida laterales y tire del parachoques. El parachoques delantero se puede girar hacia el lado opuesto para facilitar el acceso al colocar o retirar al niño.

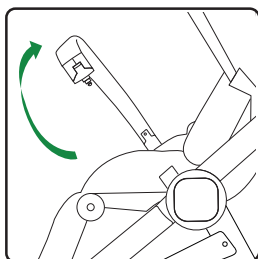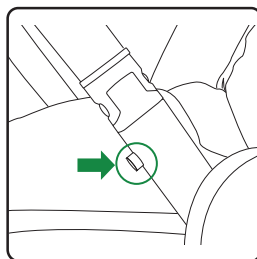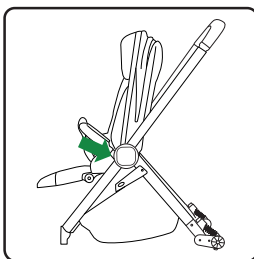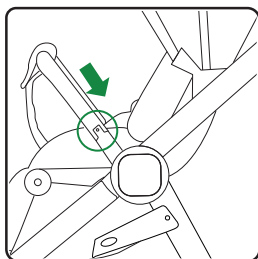


6 Ajuste el reposapiés

 Presione los botones de ajuste en ambos lados para ajustar la posición del reposapiés.

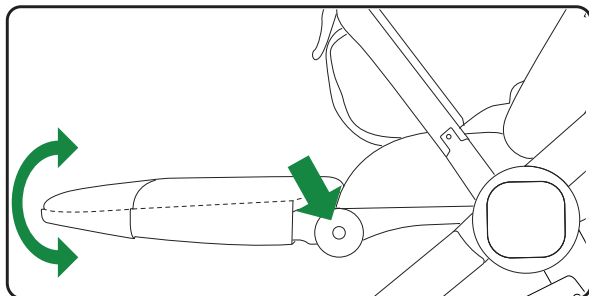



7 Ajuste del asiento

 Presione el botón de desbloqueo y levante el asiento para retirarlo. El asiento se puede reinstalar mirando hacia los padres; siga los mismos pasos a la inversa para volver a la posición orientada hacia el mundo.

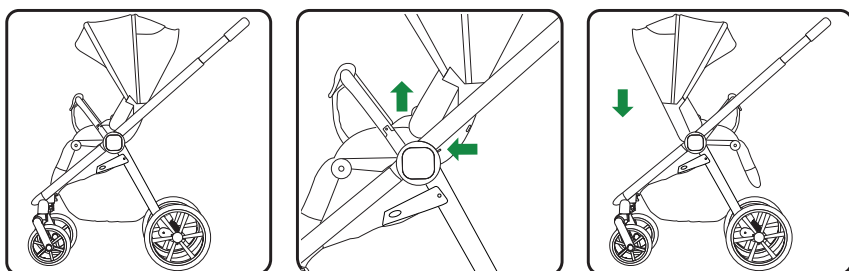




8 Ajuste del ángulo del respaldo

  Tire del botón de ajuste para configurar el respaldo en uno de los tres ángulos disponibles.

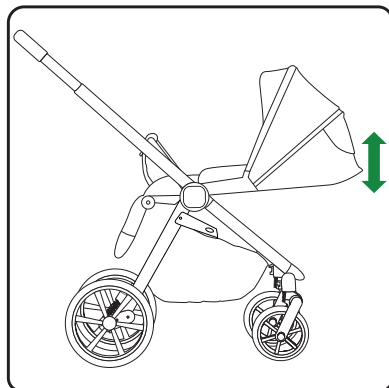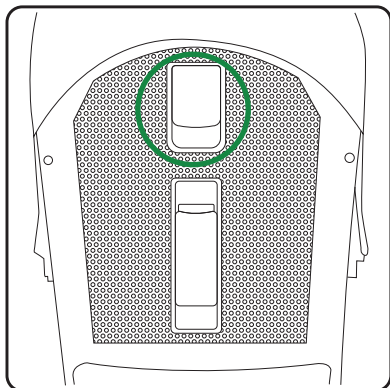


9 Ajuste de la altura de la capota

   Presione el botón de ajuste del respaldo para ajustar la altura de la capota. Abra o cierre la cremallera para extenderla o plegarla.

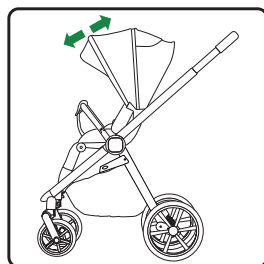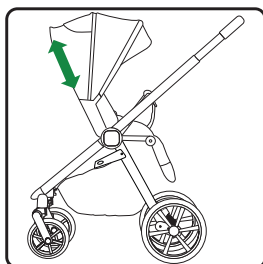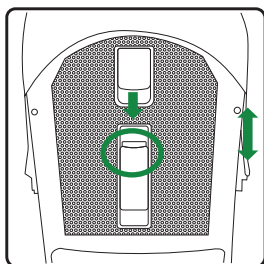

10 Mango telescópico

 Presione el botón telescópico con una mano para ajustar la altura del manillar.





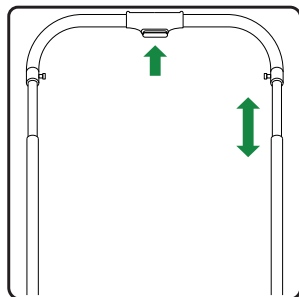


11 Plegado del cochecito


Ajuste el manillar a la posición más baja, ajuste la altura de la capota a la posición más baja y tire del botón de ajuste del ángulo del respaldo para plegarlo hacia adelante.

Gire el manillar hacia adelante.

     
Levante el asa de transporte y cierre el seguro para plegarlo.

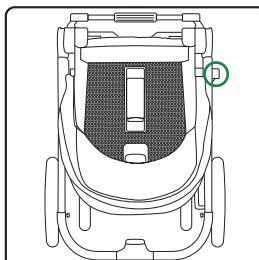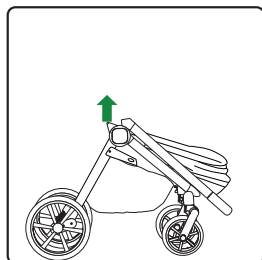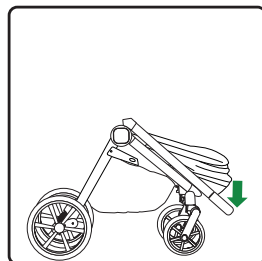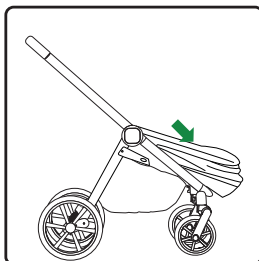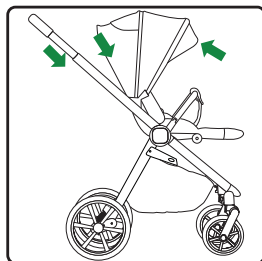

 
- 1** Inserte la parte b1 en la parte a1, inserte la parte b2 en la parte a2, un "clic" indicará que están acoplados correctamente.

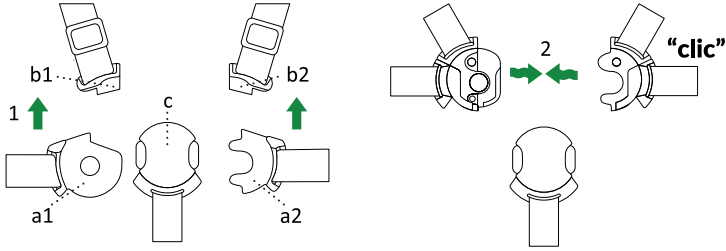

 
- 2** Coloque la parte a2 encima de la parte a1, coloque el componente de hebilla "c", como se muestra en la imagen de arriba encima de las partes combinadas a1+a2. Un clic indicará que están conectados correctamente.

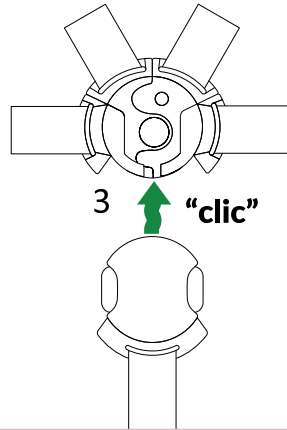

 - 3** Para soltar la hebilla, presione los botones a cada lado.

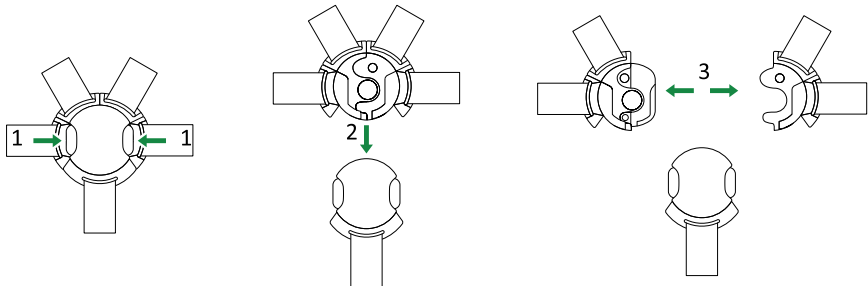

Ajuste del cinturón de seguridad


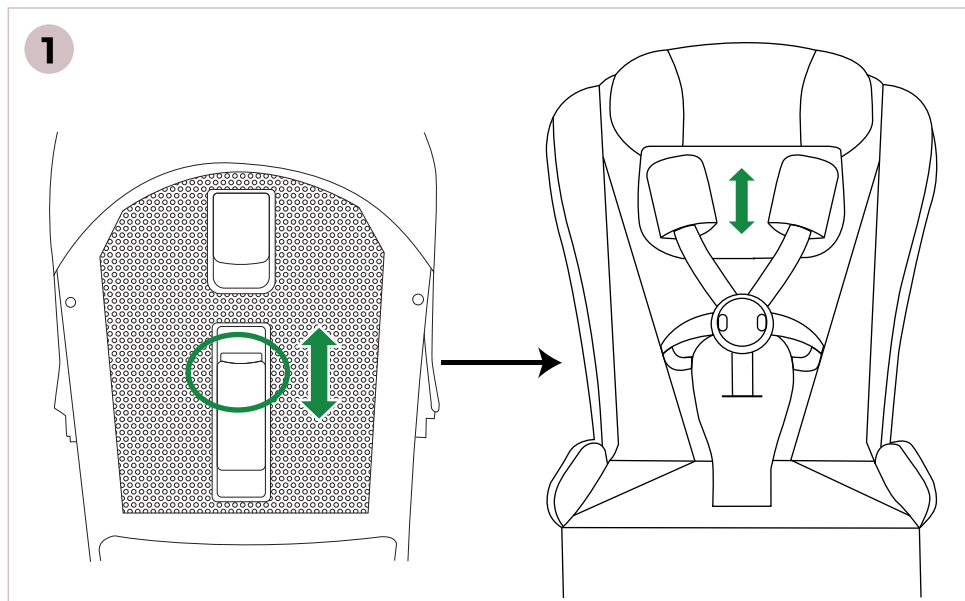 


! The product can be used ONLY for babies who cannot sit or stand unaided (Under 6 months approx. Never use the products for babies who may raise itself by its hands or knees) Must NOT use the product when the baby is able to sit unaided. Recommended time for continuous use is 1 hour.




1 Montar el capazo

Retirar la ropa de cama y el colchón.



 
 
Apretar los tensores metálicos de la placa inferior en la dirección de las flechas (ver imagen a) hasta que encajen en los soportes. Debería oír un clic. La capota del capazo se puede extender o plegar como se muestra en la imagen b.

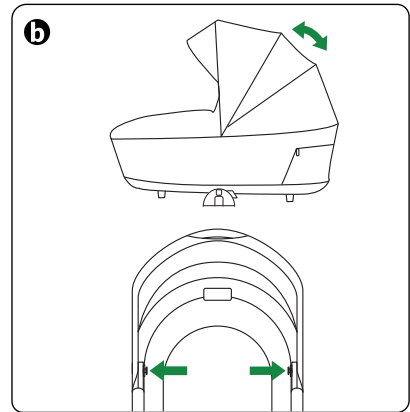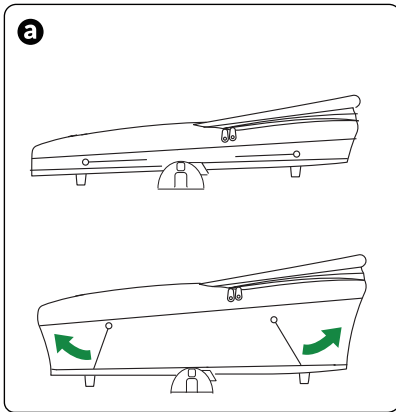

   2 Baje los adaptadores del capazo como indican las flechas. Asegúrese de que encajen en su lugar para confirmar que están bien bloqueados. Para desmontarlos, presione los botones de liberación rápida de los adaptadores y tire de ellos hacia arriba.

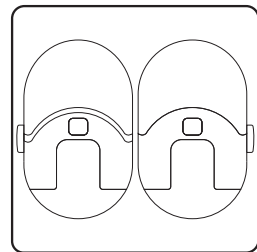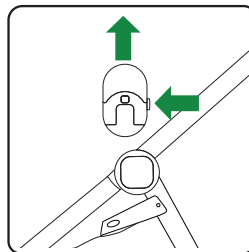
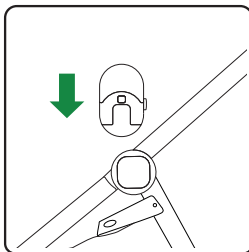


    - 3** Coloque el capazo directamente sobre el chasis hasta que oiga un clic a ambos lados (ver imagen a). Al montarlo, asegúrese de que el bebé esté mirando hacia los padres, como se muestra en la imagen b. Para retirar el capazo (imágenes 14a-14b), presione los botones de memoria a ambos lados (uno a la vez si es necesario) y luego levante el capazo del chasis.

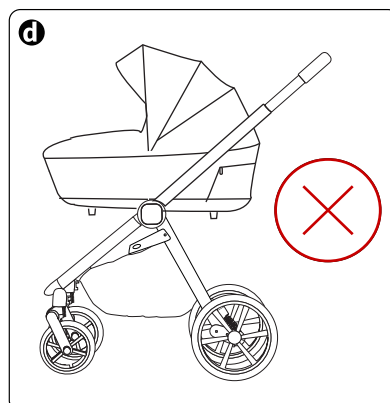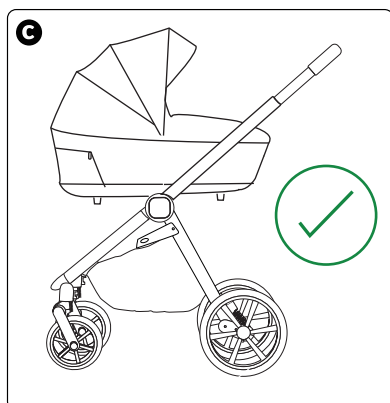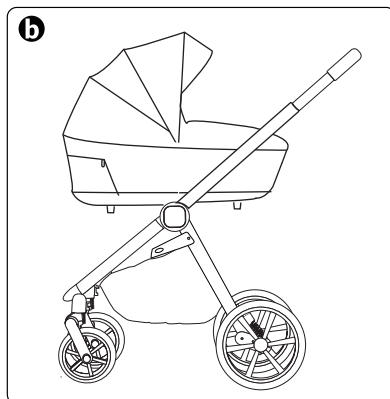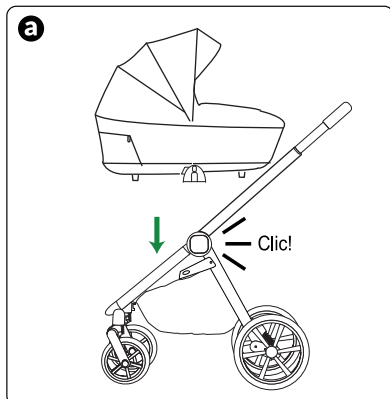

4 Retire el capazo

  Presione los botones de memoria en ambos lados (uno a la vez si es necesario) y luego levante el capazo para retirarlo.

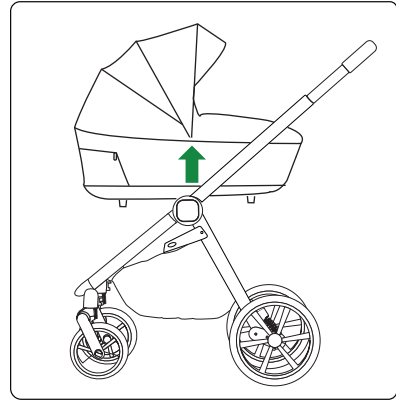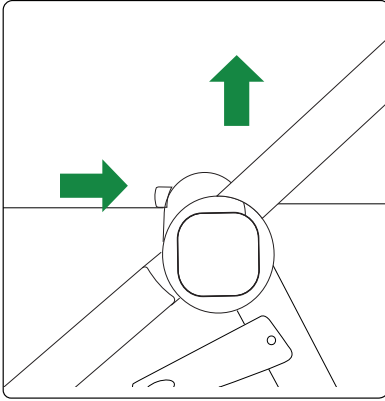

¡NOTA! El cochecito está diseñado para niños de hasta 6 meses y 9 kg de peso, que no pueden sentarse, arrodillarse ni gatear por sí solos.

Deje de usar el cochecito si su hijo empieza a sentarse, arrodillarse o a caminar solo.

 
 
 
WARNING: No utilice un colchón adicional con un grosor superior a 15 mm. La capota del cochecito se ajusta en 4 posiciones. Para ajustarla, presione simultáneamente los botones ubicados en la base del asa de transporte y ajústela a la posición deseada.

¡NOTA! El dosel externo no se puede utilizar como asa de transporte.


¡NOTA! Asegúrese de que el asa de transporte esté bloqueada en la posición correcta antes de mover el cuerpo del cochecito.

Uso con asientos de coche (opcional)

- 1** Conecte el adaptador de la silla de auto al armazón hasta que oiga un suave "clic", lo que indica que está bien fijado. Alinee la silla de auto con los adaptadores y luego empújela suavemente hacia abajo hasta que oiga otro "clic", lo que confirma que la silla está correctamente fijada al armazón.

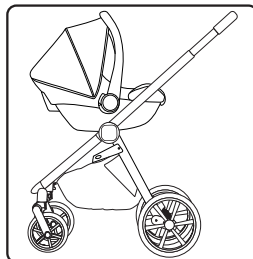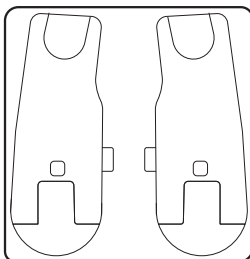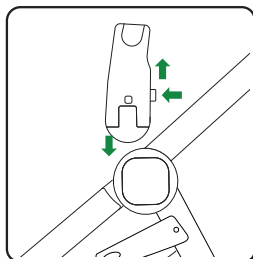


 - 2** Para retirar la silla del armazón, simplemente presione los botones de liberación a ambos lados de la silla mientras levanta la silla del armazón.

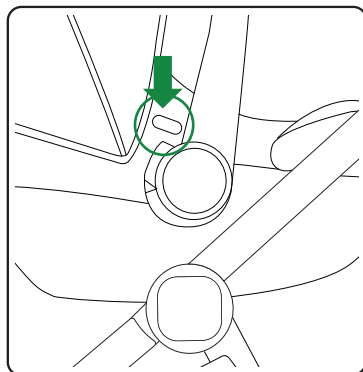


Accesorios

 
1 Saco de pies

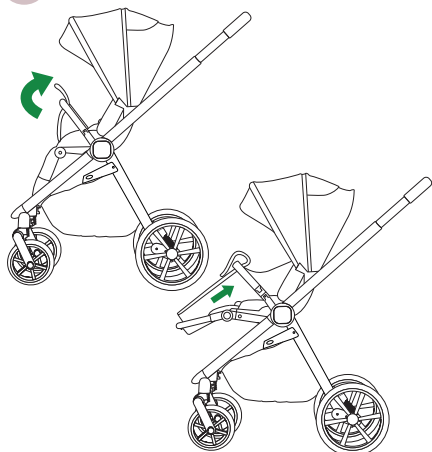


2 Protector de lluvia

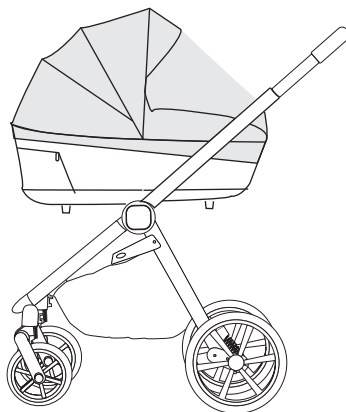 

3 Soporte para teléfono

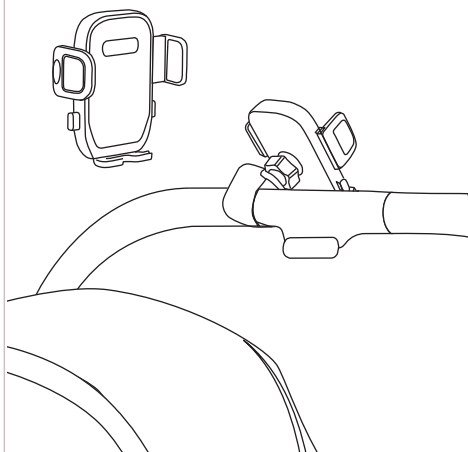 

4 Bolsa

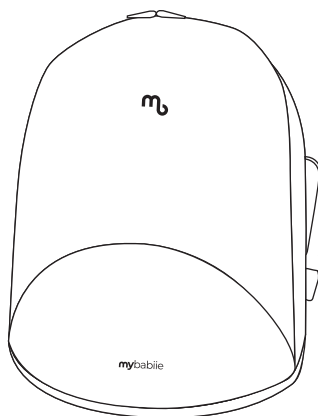 

IMPORTANTE: CONSERVE PARA FUTURA REFERENCIA: LEA ATENTAMENTE

Lea atentamente estas instrucciones antes de usar y consérvelas para futuras consultas. Retire todo el embalaje y las etiquetas no permanentes y deséchelos de forma segura antes de usar este producto. La seguridad de su hijo podría correr peligro si no sigue estas instrucciones.

Este cochecito está diseñado para un niño desde los 0 meses hasta un peso de 22 kg/36 meses.

ADVERTENCIA: Nunca deje a su hijo sin supervisión.

ADVERTENCIA: La carga desigual o excesiva de artículos sobre o dentro del cochecito puede hacer que el producto se vuelque y causar lesiones.

ADVERTENCIA: El peso máximo previsto dentro de la cesta es de 3 kg.

ADVERTENCIA: Asegúrese de que todos los dispositivos de bloqueo estén activados antes de usar.

ADVERTENCIA: Para evitar lesiones, mantenga a su hijo alejado al desplegar y plegar este cochecito.

ADVERTENCIA: No permita que su hijo juegue con este cochecito.

ADVERTENCIA: Utilice siempre el sistema de retención. **ADVERTENCIA:** Compruebe que el cuerpo del cochecito o los dispositivos de fijación del asiento estén correctamente enganchados antes de usarlos.

ADVERTENCIA: No coloque bebidas ni líquidos calientes en el portavasos.

ADVERTENCIA: Este producto no es apto para correr ni patinar.

ADVERTENCIA: No introduzca colchones adicionales en el cochecito.

ADVERTENCIA: No se deben utilizar accesorios no aprobados por el fabricante.

ADVERTENCIA: Este cochecito ha sido diseñado para un niño y debe utilizarse únicamente para el transporte de un niño.

ADVERTENCIA: Utilice siempre la correa de la entrepierna junto con el cinturón abdominal.

ADVERTENCIA: Este cochecito no sustituye a una cuna ni a una cama. Si su hijo necesita dormir, debe colocarlo en una cuna o cama adecuada.

ADVERTENCIA: Solo se deben utilizar piezas de repuesto suministradas o recomendadas por My Babiie.

ADVERTENCIA: Cualquier carga fijada al manillar, al respaldo o a los laterales del cochecito afectará su estabilidad.

ADVERTENCIA: El dispositivo de estacionamiento debe estar activado al colocar y retirar a los niños.

ADVERTENCIA: El capazo no debe usarse una vez que el niño pueda sentarse solo, darse la vuelta o incorporarse apoyándose en las manos y las rodillas. Peso máximo del niño: 9 kg.

ADVERTENCIA: Use el asiento en la posición más reclinada para recién nacidos hasta que puedan sostener la cabeza por sí solos.

Homologado según la norma EN 1888-1 y 2:2018+A1:2022

Homologado según la norma EN 1466:2023

- Este producto es apto solo para un (1) niño.
- No utilice el producto una vez que el niño pueda sentarse solo, darse la vuelta y levantarse apoyándose en las manos y las rodillas.
- Peso máximo del niño: 9 kg.
- No añada un colchón adicional.
- Este producto es compatible con el chasis del cochecito.
- Úselo únicamente sobre una superficie firme, horizontal, nivelada y seca.
- No permita que otros niños jueguen sin supervisión cerca del capazo.
- No lo utilice si alguna pieza del capazo está rota, rasgada o falta.
- No deje las asas flexibles de transporte dentro del capazo.
- Nunca deje a su hijo sin supervisión.
- Utilice únicamente piezas de repuesto originales. El uso de repuestos puede ser peligroso.
- Tenga en cuenta los riesgos que presentan las llamas abiertas y otras fuentes de calor, como calentadores eléctricos, llamas de gas, etc., especialmente si se encuentran cerca del capazo.
- Utilice únicamente el colchón que viene con el capazo. Revise periódicamente el asa de transporte y la base, incluidas las patas, para detectar desgaste o daños.
- Nunca utilice el capazo sobre un soporte.
- Asegúrese de que la cabeza de su hijo nunca esté a un nivel inferior al de su cuerpo al colocarlo dentro del capazo.
- Todas las asas de transporte deben permanecer fuera del cuerpo del cochecito durante su uso.

EN 1466:2023

Cuidado y mantenimiento

- Compruebe periódicamente el correcto funcionamiento de los frenos, las ruedas, los cierres, los elementos de conexión, los cinturones y las costuras.
- No exponga la carriola a la luz solar directa.
- Limpie solo con una esponja.
- Después de usarla bajo la lluvia o la nieve, lubrique las ruedas y seque la carriola para evitar la oxidación.
- Cuide, limpie y revise esta carriola periódicamente.
- No utilice accesorios no aprobados por el fabricante.

La seguridad de su hijo es su responsabilidad.

Si tiene algún problema con este producto o necesita piezas de repuesto, visite www.mybabiie.com/support.

 
Registre su producto en: www.mybabiie.com/warranties

Pushchair Do's & Don'ts



Do use your brakes!

Ensure the parking brake is engaged during the loading and unloading of children & when the pushchair is stationary.

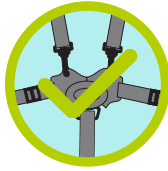

Do always use the restraint system!

Ensure that the child restraint system is correctly fitted at all times.



Do keep your pushchair clean and dirt free.

Use a clean white cloth, warm water and a mild detergent to keep your pushchair clean.



Do always keep two hands on the handles when pushing.

You could lose control of your pushchair if not steering with both hands.



Do follow manufacturers instructions when assembling and using your pushchair.

For safety, please refer to our instruction manuals or contact customer support if you're unsure.



Don't use your pushchair up and down stairs!

Don't use your pushchair up or down stairs or to bump kerbs.



Don't hang bags off the handles!

Bags and other items should not be hung from the handles as this can affect the stability of the pushchair.



Don't run or skate with your pushchair!

Our products are not suitable for running or skating.



Don't carry the stroller with baby inside!

Our pushchairs are not designed to be carried with your baby inside them.



Don't put hot drinks in the cup holder.

Hot drinks burn and can easily spill from the bottle holder.



Don't jetwash your pushchair.

Some jet washers are very powerful and could damage parts of your pushchair!



Don't leave your child un-attended in their pushchair.

Always keep your child and pushchair in view to avoid accidents.



Don't treat your pushchair like a trolley.

Don't load your pushchair up with all your shopping as they are not built for this purpose and could cause damage.



Don't use your pushchair as a bumper cart!

Damage can easily occur if your pushchair is knocked into other things.



Don't smoke around your pushchair.

We wouldn't want your pushchair or little one getting hurt or damaged!



Don't leave your pushchair unattended on extreme gradients.

Even with your brakes on your pushchair is at risk from tipping or sliding on extreme gradients!



 
Don't sit in the pushchair unless the user is under the guideline weight.

Our pushchairs are designed to hold a maximum weight. If exceeded this will cause damage!



Do enjoy your My Babie product!

Go out and have fun adventures with your little one!

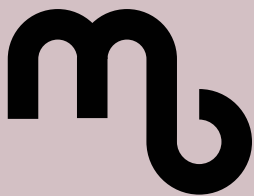

Register your product

 www.mybabiie.com/warranties

 www.mybabiie.com/registro

In the first instance of needing assistance please contact your original place of purchase.

This product qualifies for 12 month warranty when registered through our website

mybabiie.com



My Babiie



@MyBabiieOfficial



My Babiie



@mybabiie_official