

For use with tall bottles, a riser base is available to purchase at babybrezza.co.uk



babybrezza® Customer Service

If you need help with your Baby Brezza Formula Pro® Mini in the UK or Ireland, visit www.babybrezza.co.uk or email help@cheekyrascals.co.uk. Returns should be made to the store you purchased it from, but before you do, please first contact either Cheeky Rascals or Baby Brezza so that we can give you expert advice customised to your particular situation. Returns cannot be accepted once powder and/or water has been added to the machine unless there is a fault covered by the Warranty.

Limited 1-Year Warranty

The limited warranty is valid only on products bought through authorised resellers and used in the UK and Ireland. Buying through an unauthorised reseller or using this product outside of the UK and Ireland automatically voids this warranty.

This warranty is available to consumers only. You are a consumer if you own a Baby Brezza Formula Pro® Mini that was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners. We warrant that your Baby Brezza Formula Pro® Mini will be free of defects in material or workmanship under normal home use for one year from the date of original purchase when used in accordance with the instructions and maintained correctly. Customer will be required to present original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture. If your Baby Brezza Formula Pro® Mini should prove to be defective within the warranty period, we will repair it or, if we consider it necessary, replace it.

To obtain warranty services, in the UK or Ireland, please visit www.babybrezza.co.uk
Alternatively, contact help@cheekyrascals.co.uk

This product may be covered under one or more of the following including U.S. Patent No. 8,584,901, Canada Patent No. 2,842,603, China Patent No. CN103874441, Australia Patent No. 2011374309, Spain Patent No. ES2473790B2 and pending patent application(s) in the U.S. and other countries.

babybrezza.co.uk

© 2023 Baby Brezza Enterprises LLC

Distributed in the UK & Ireland by Cheeky Rascals Ltd, Liss Mill, Mill Road, Liss, Hampshire, GU33 7BD UK help@cheekyrascals.co.uk
For other EU countries, please contact: Gamin Tout Terrain, 52 rue Edouard Pailleron, 75019 Paris, France babybrezza@gamin-tout-terrain.com
Baby Brezza Enterprises LLC 250 Passaic St, Newark, NJ 07104



babybrezza®

formula pro®
mini

Instructions for set-up, use and cleaning

**ACTIVATE
YOUR WARRANTY**

Scan here



www.babybrezza.co.uk/register

Benefits:
Faster customer support,
extended customer service
hours & more



Please read fully to ensure your Formula Pro® Mini works properly every time, and keep for future reference.

Essential safeguards for the health of your baby

- To ensure proper nutrition, only use the Formula Pro® Mini at the setting for your specific formula milk defined on www.babybrezza.co.uk/formula-pro-settings/
- This machine does not heat the water to 70°C or above. Therefore, the milk prepared by the Formula Pro® Mini is for immediate consumption. Prepare one bottle at a time and do not store leftover milk.
- Set-up and cleaning is critical to the function of your Formula Pro® Mini. Please follow all instructions properly.
- Always use sterile or boiled water cooled to room temperature.
- Bottled water should only be used if suitable for infant formula preparation i.e. sterile and not containing too many salts or sulphate.
- Unboiled tap water and/or unsterilised baby bottles can potentially lead to adverse effects for the health of your baby.
- Always wash your hands thoroughly with warm soapy water for at least 20 seconds before touching the machine, any of its parts or your baby's bottle.
- Clean any surfaces that your Formula Pro® Mini or any of its parts are likely to come into contact with.
- Before serving make sure formula mixture is at a safe temperature for baby.
- If your child was born premature, with low birth-weight or is immune deficient, please consult your doctor before using this machine. **Never leave your Formula Pro® Mini in a hot environment such as a car or sun exposed area for long periods of time as it may affect the formula powder and dispensing accuracy.**

SAFETY PRECAUTIONS


When using electrical appliances, basic safety precautions should be followed, including the following:

1. To protect against electric shock and injury to persons, do not immerse cord, plug, or appliance in water or other liquid.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
3. Turn off and unplug the appliance from the outlet when not in use, before assembling or dismantling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
4. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact the manufacturer at their customer service telephone number for information on examination, repair, or adjustment.
5. The use of accessory attachments not recommended by the appliance manufacturer may cause fire, electric shock or injury.
6. Use on a level surface and be sure there is no debris under the unit and the rubber wheels are touching the surface.
7. For household use only. Do not use outdoors.
8. Do not let cord hang over edge of the table or the counter, or touch hot surfaces.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. Do not use appliance for other than its intended use.
11. Do not attempt to use the machine without water in the Water Tank.
12. A short power-supply cord is provided to reduce risks of becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If using the machine with an extension cord, make sure the cord is the proper electrical rating for the machine. The extension cord should be arranged so that it does not drape over a counter top or tabletop, where it can be pulled on by children or tripped over unintentionally.
13. Avoid contact with moving parts. Never remove the Powder Container, Powder Container Lid, Funnel or Water Tank while machine is in operation.
14. Do not dismantle or open Base of machine.
15. This appliance has a moulded UK 3-pin plug (Type G) which should not be tampered with. Removal of the plug will invalidate the warranty of the appliance
16. Repair or attempted repair or modifications by persons who are not Baby Brezza, or approved by Baby Brezza, will invalidate the warranty.

TECHNICAL DATA
Supply Voltage: 120V ~ 60Hz

Model: FRP0079
Current: 2.5A

Heater Power: 260W
Motor Power: 20W

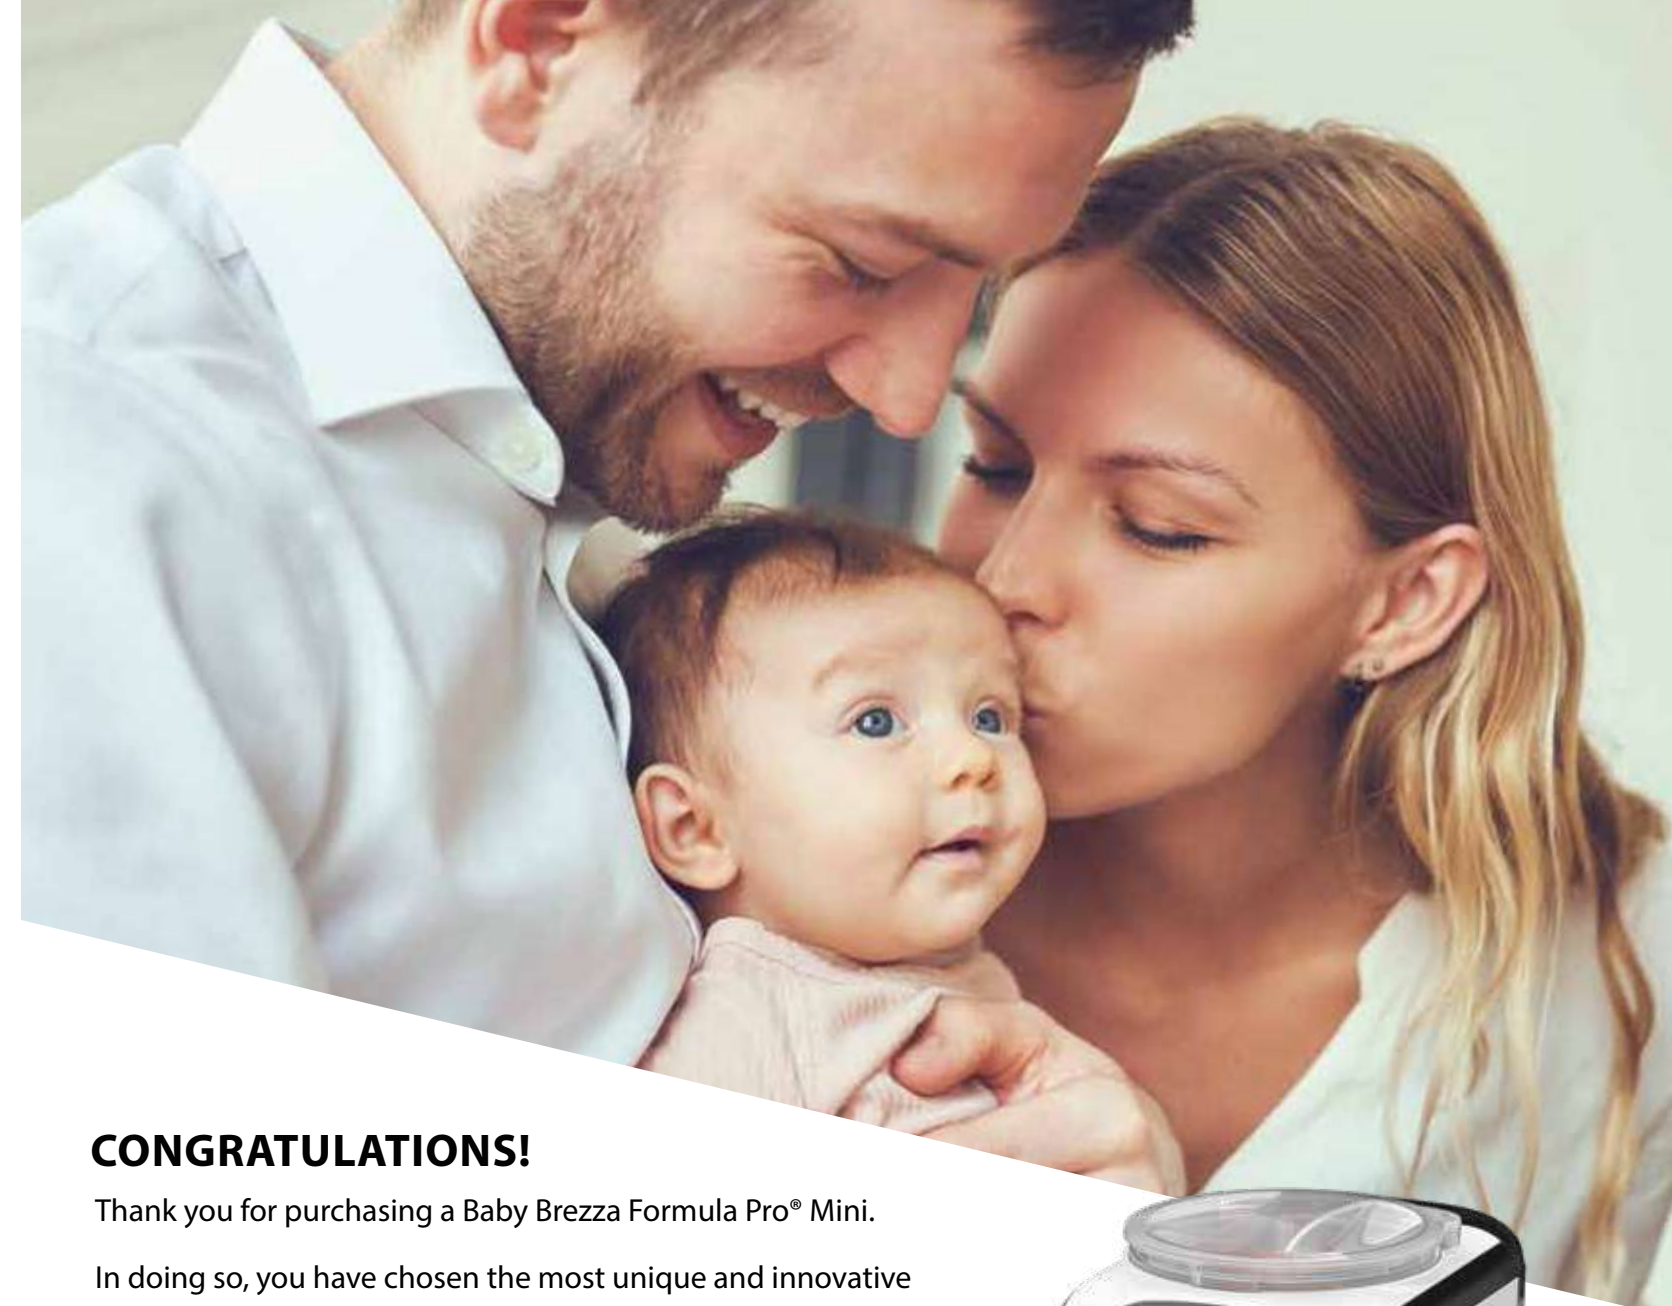

CONGRATULATIONS!

Thank you for purchasing a Baby Brezza Formula Pro® Mini.

In doing so, you have chosen the most unique and innovative on-demand baby formula maker on the market.

At Baby Brezza, we developed the Formula Pro® Mini to help parents save time and frustration when it comes to feeding their babies, especially on the go.

Please read and follow all instructions carefully. Sections A-G should be completed before first use and when the machine has not been used for a while.



Before you start preparing bottles for your baby

Attention: Don't take anything apart yet. Follow these steps before doing anything else.

A) Rinse the machine

- Thoroughly clean any surface that is likely to come into contact with the Formula Pro® Mini or any of the components.
- Place the Formula Pro® Mini on the counter or other level surface and turn it around so the back is facing you.
- Remove the Water Tank and Water Tank Lid from the back of the machine, wash it with hot soapy water and rinse thoroughly, then air dry.
- Fill Water Tank with bottled water suitable for infant formula preparation, or pre-boiled water, cooled to room temperature (45°C or below).
- Place Water Tank and Lid back on Base, turn the machine around so the front is facing you and then plug it in. The machine will turn on and the LCD screen will light up.
- The machine will beep once to tell you it's powered on. You'll also see the LCD display turn on. If the LCD screen is not lit up when plugged in, press the power button to turn on the machine.

Now let's rinse the inside of the machine.

- Get a cup or bottle larger than 300ml and place it under the Funnel.
- Press the "ml" button on the Control Panel repeatedly until the LCD screen says "300ml".
- Now press the "Start" button on the Control Panel. The Formula Pro® Advanced will dispense 300ml of water.
- Dispose of the water dispensed, or use it to water your plants.


B) Clean the removable parts

Unplug the machine, remove all the parts shown on the next page.

- Remove all the parts from the machine as shown on page 4.
- Wash all the parts except for the machine itself in hot soapy water and allow to thoroughly air dry.
- **NEVER** wash any of the parts in a dishwasher, steriliser or microwave.
- Get familiar with the part names on the next page before moving to section C.

Formula Pro® Mini - parts

Disassemble and wash all parts (except the Base) and allow to air dry. Assemble as shown on pages 5 & 6.

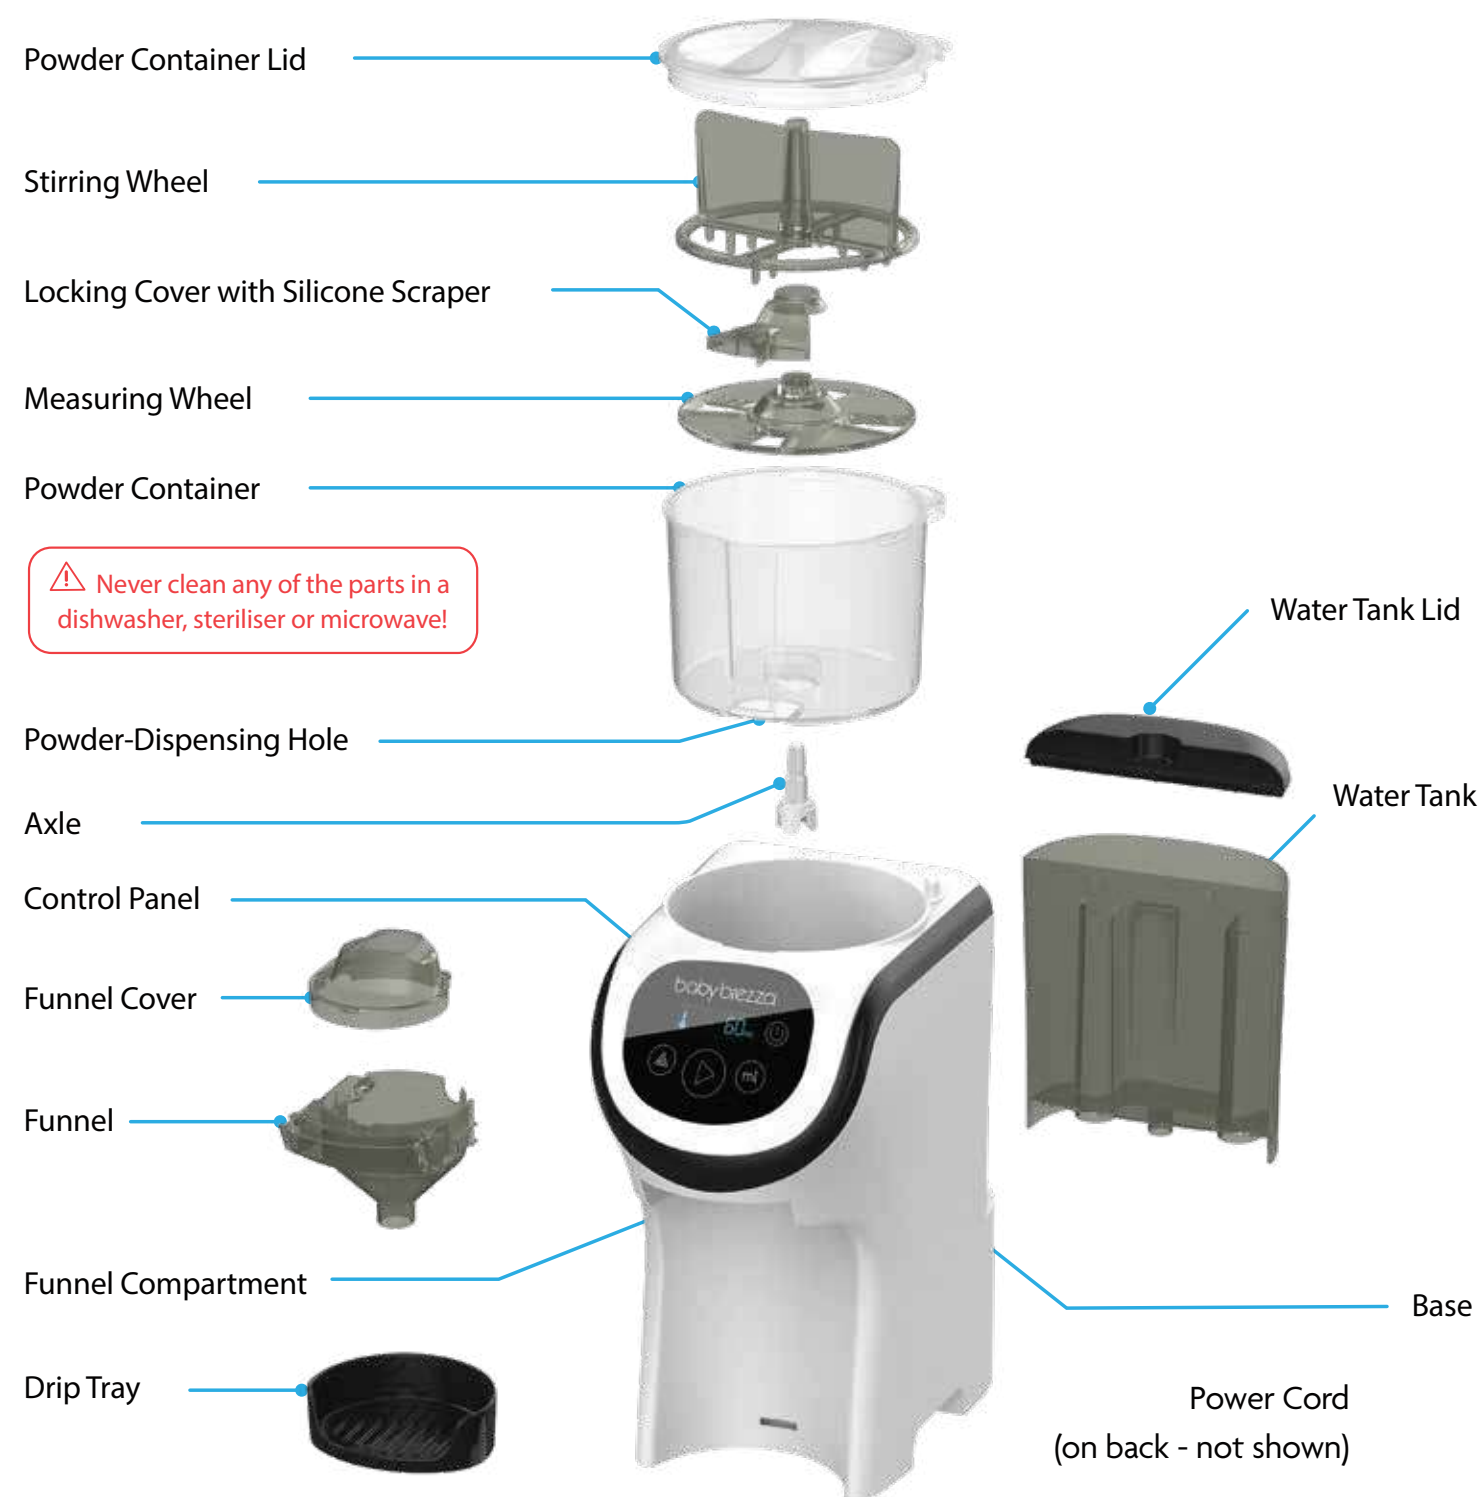

For use with tall bottles typically 240ml or larger, a riser base is available for purchase separately at babybrezza.co.uk



C) Assemble your Formula Pro® Mini

Set-up and cleaning videos available at
www.babybrezza.co.uk



1

Wash these parts in hot soapy water and **completely air dry** before assembly.



2

Assemble the Funnel and Funnel Cover. Then insert funnel assembly into Funnel compartment by sliding it up, then in.



5

Place the Measuring Wheel into the Powder Container, fitting it over the Axle with the flat side facing down. Make sure the holes in the Measuring Wheel are in the same position as shown above.



6

IMPORTANT

1. Place the front edge of the Locking Cover in the recess in the inside/front of the Powder Container, **under the tab**.
 2. Fit hole in Locking Cover over the Axle and press down to lock in place.



3

Place the Axle on the Base as shown.



4

Now place the Powder Container on the Base with the printed markings facing you.



7

Make sure the Locking Cover is snapped onto the Measuring Wheel and looks like this when assembled.



8

Now place the Stirring Wheel on the Axle and push down firmly until you hear a 'click'. When the Stirring Wheel is properly 'clicked' into place it will not lift up easily.

D) Add the powder



Carefully pour formula powder into the Powder Container. Make sure the powder is filled between the "MIN" & "MAX" lines printed on the Powder Container.



Place the Lid on the Powder Container and turn clockwise until it stops. This will engage the safety switch & lock the Powder Container onto the Base. To remove the Powder Container, turn the Lid counter-clockwise.

E) Drip Tray Set-up



The Drip Tray can be used in 2 positions to make sure your bottle fits under the Funnel.



Place the Drip Tray so that your bottle is as close to the Funnel as possible to avoid spills.

Now let's review the controls on the next page.

F) Set up the controls

Set-up and cleaning videos available at www.babybrezza.co.uk

LCD Display: Shows selected functions & warnings.

Powder Setting button: Press to select setting number for your formula brand and type.

Start button: Press to start dispensing formula.

Power button: Press to turn machine on or off. Press to stop dispensing.

ml button: Press to select ml of water dispensed. (Press & hold the button for 5 seconds to change to ounces).

Go to babybrezza.co.uk to find the correct setting for your formula powder.

Powder & water settings

setting 5 Powder Setting Indicator - Use the "Powder Setting" button to choose your powder setting 1-10. Go to babybrezza.co.uk to find the correct setting for your formula powder.

60 ml ml Indicator - Use the "ml" button to choose how many ml of water to mix with powder. 60, 90, 120, 180, 240, 300 ml of water are available. There is no option to make a 30ml bottle. Press and hold the 'ml' button for 6-7 seconds to convert to Ounces and then select the number of Ounces required. 1 Ounce is equivalent to 30ml, so choose between 2-10 ounces.

Water temperature

The temperature icon will flash when heating & will stay solid when the water reaches body temperature.


Warning symbols

The Formula Pro® Mini will not run if any of these symbols are illuminated on the LCD display.

- Powder Lid Open - The Powder Container Lid is not closed completely or is not on the Powder Container correctly. Close the Powder Container Lid completely and correctly when this symbol is illuminated.
- Low Water - Refill Water Tank when this symbol is illuminated.
- Clean Funnel - This symbol will illuminate after every 4 bottles are made. When this symbol is illuminated, remove Funnel assembly, wash and dry completely, then place it back into the Base. See Page 11 for details.
- Funnel Out - Funnel is removed or not inserted completely. Make sure the Funnel is pushed all the way in.

G) Prepare your first bottle


Make sure your Formula Pro® Mini is plugged in and turned on.

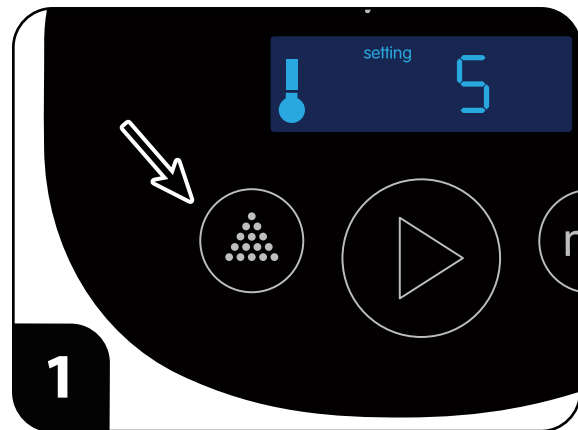

Go to babybrezza.com/settings to find the correct setting for your formula powder.
Press the "Powder Setting" button repeatedly to select your setting 1 - 10.

It is essential that you choose the correct setting for your formula (brand, type, stage and scoop weight).

If your formula is not listed: In the UK or Ireland please visit cheekyrascals.co.uk/contact-us, in other countries go to babybrezza.com/pages/international to find your local representative.

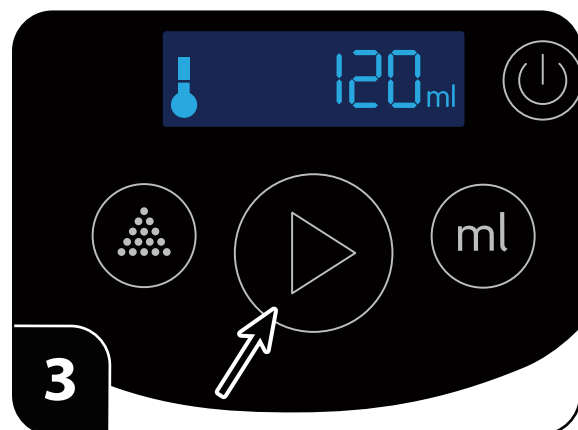

Press the "Start" button to dispense formula.
You can press the "Power" button to stop dispensing.

The Formula Pro® Mini will remember the setting & ml size even if it is unplugged or turned off.


You do not need to select a powder setting every time you make a bottle.

You can always change the ml size or powder setting by pressing the buttons again.



Press the "ml" button repeatedly to select the volume of water you want to dispense.

ml size indicates water volume only. It does not include the volume of powder added when mixing.

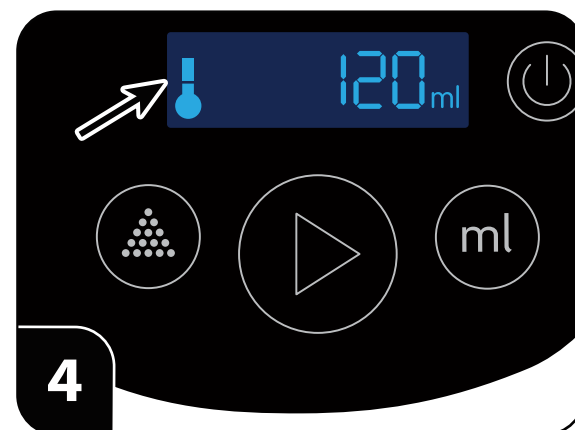

The temperature icon will flash when heating and will stay solid when the water reaches body temperature.



The Formula Pro® Mini will dispense powder & water together, then stop automatically when dispensing is complete.

Some clumping may occur with some formula powders inherently difficult to mix with water.



Check for clumps and shake or stir the bottle if necessary. Check temperature and feed your baby.

Set-up and cleaning videos available at www.babybrezza.co.uk



PLEASE NOTE: The level will appear higher than the ounce size selected because of added powder volume and/or variance in bottle markings.
Example: 120ml of water plus powder volume is approximately 130-140ml depending on your formula powder type.



Refill the powder when the "REFILL" mark is visible in the Powder Container.

Easy Daily Cleaning Instructions

It is **EXTREMELY IMPORTANT** to clean the funnel after every 4 bottles made.

This will keep your Formula Pro® Advanced dispensing accurately.

The machine will not work unless the Funnel is cleaned after every 4 bottles.

Always make sure Funnel & Funnel Cover are **COMPLETELY DRY** before re-assembling.

Always thoroughly wash your hands and any surfaces that will be used before the daily or monthly clean.



1 Remove Funnel & Funnel Cover by pulling out and down.



2 Wash Funnel & Funnel Cover with warm, soapy water & rinse well.

Air dry completely before re-installing.



3 Wipe the Powder-Dispensing Hole on the underside of the Powder Container using a dry paper towel or soft dry cloth.



Suggestion to make cleaning easier

To make daily cleaning even easier, you can purchase an spare Funnel & Funnel Cover on **Babybrezza.co.uk**. Then you can swap the spare Funnel with the Funnel that needs to be cleaned. NOTE: you will still need to wipe the Powder-Dispensing Hole as shown in Step 3.

PLEASE NOTE: You **don't** need to remove the Powder Container or the Powder Container parts for daily cleaning.

Monthly Cleaning Instructions

Set-up and cleaning videos available at

www.babybrezza.co.uk

Once a month, give your Formula Pro® Mini a thorough cleaning.



1 Hand wash all parts shown above with warm soapy water, rinse well and air dry thoroughly.



2 Hand wash Water Tank and Lid with warm soapy water, rinse well and air dry thoroughly.

Monthly Descaling Instructions

It is necessary to **remove all formula** from the Powder Container for the monthly descaling.

To prevent mineral scale on the water heater inside your Formula Pro® Mini, follow these easy steps:

1. Remove the Water Tank, empty it and fill it with 400ml of purified water and 400ml distilled vinegar.
2. Place the Water Tank on the Base of the machine and place a cup larger than 300ml under the funnel.
3. Select "300ml" with the "ml" button, then press the "Start" button to dispense.
4. Empty the cup, place back under the Funnel, then press the "Start" button again to dispense another 300ml.
5. Now unplug the machine, remove the Water Tank, and empty it. **Let the machine sit for 4 hours.**
6. Wash, rinse and fill the Water Tank to the "MAX" line with sterile or pre-boiled cooled water, then place it back on the Base.
7. Plug in the machine, place a cup to catch 300ml water and use the "Start" button to run an 300ml cycle. Dispose of the water dispensed in the cup and then repeat this step to run the entire tank of water through the machine. When the "Low Water" indicator turns on, you're done rinsing.
8. Refill the Water Tank with sterile or pre-boiled cooled water and return to normal use.

Long Term Storage Instructions









It is **EXTREMELY IMPORTANT** to clean the machine and remove all formula powder residue before storage.

If you're going to store your Formula Pro® Mini for later use, or will not use it for a while, please follow the instructions below:

1. Remove the Powder Container parts, Funnel, Funnel Cover, Drip Tray and Water Tank from the Base.
2. Wipe the Base with a clean damp cloth and make sure to remove any and all formula residue. Dry the Base well.
3. Empty the Powder Container, wash all Powder Container Parts, air dry thoroughly, reassemble & reinstall on the Base.
4. Follow the Monthly Descaling Instructions on page 12, steps **1-7 only**. Do not remove or refill the Water Tank after step 7.
5. Remove the Water Tank and turn the Base of the machine upside down over a sink. Water will drain from the vent hole in the top/back of the machine. You can press the spring-loaded valve on the Base where the Water Tank connects to let air in, and all water out of the machine.
6. Unplug the machine, remove the Funnel, Funnel Cover and Water Tank, air dry them both thoroughly and reinstall them on the machine.
7. Your machine is now ready for storage. Pack the machine in its box, or enclose it in a bag to keep it dust free.

Error Codes

In the unlikely event of an electrical component error or interruption during operation, the following codes will be displayed on the LCD screen. Pressing and holding the "Power" button will clear the code, and operation should return to normal. If the code returns or is unable to be cleared, please contact Baby Brezza Customer Service.

-  Indicates an operation error of the motor that turns the Powder Container parts. Contact Baby Brezza Customer Service*.
-  Indicates an operation error of the motor sensor that detects the rotation of the Measuring Wheel. Contact Baby Brezza Customer Service*.
-  Indicates an operation error of the water flow meter that measures the water volume output. Contact Baby Brezza Customer Service*.
-  Indicates an operation error of the temperature sensor that measures water temperature. Contact Baby Brezza Customer Service*.
-  Indicates an operation error of the water level switch that measures the water remaining. Contact Baby Brezza Customer Service*.
-  Indicates that hot water has been poured into the Water Tank and entered the machine. Empty the Water Tank, refill it with room temperature water, return it to the Base and wait for the water inside the machine to cool. Press & hold the "Power" button to clear the code.
-  Indicates that the Powder Container Lid has been opened during operation. Make sure the Powder Container Lid is completely closed, press and hold the "Power" button to clear the code. The machine will return to normal.
-  Indicates that the Funnel has been removed during operation. Make sure the Funnel and Funnel Cover are installed correctly, press and hold the "Power" button to clear the code. The machine will return to normal.

Troubleshooting

Condition	Possible Cause	Possible Remedy
Machine will not start.	Machine is unplugged.	Make sure the plug is securely inserted into the power outlet.
	Machine is not turned on.	Press "Power" Button to turn on machine.
	Funnel is removed or not fully inserted.	Insert Funnel or push front of Funnel until flush with machine.
	Water level is below "MIN" line.	Add more water to Water Tank.
	Powder Container is removed or not fully seated.	Make sure Powder Container is placed on Base properly.
	Powder Container Lid is not completely closed.	Turn Powder Container lid clockwise to close completely. See page 7, step 2 for details.
	Powder Container Lid is on backwards.	Make sure tab on edge of Powder Container Lid is facing the back of the machine and engaged with safety switch. See page 7, step 2 for details.
	Water in Water Tank is too cold. (Panel is flashing)	Wait for water to warm up to body temperature.
Water in Water Tank is too hot. (Panel is flashing)	Wait for water to cool down.	
Temperature of dispensed formula is too cold.	Water has not yet been heated to correct temperature.	Wait for heater to warm water. Make sure selected temperature symbol stays on solid instead of flashing.
Funnel will not fit all the way into the Funnel Compartment.	Funnel Cover is not straight on Funnel and/or not pushed down completely.	Align tab on front of Funnel Cover with notch in Funnel and push down Funnel Cover completely.
Clean Funnel symbol is on, Formula Pro® beeps when start button is pressed.	Funnel and hole on underside of Powder Container require cleaning.	Follow steps on page 11 to clean and air dry Funnel and hole on underside of Powder Container.
Too much powder dispensed.	Locking Cover is not installed correctly.	Check Locking Cover and make sure the front edge is locked under the tab in the Powder Container. See page 6, step 6 & 7 for details.
	Incorrect "Powder Setting" selected.	Make sure to select the correct setting number for your powder type. For details, go to babybrezza.co.uk/settings
Not enough powder dispensed.	Powder level in Powder Container is too low.	Refill Powder Container with more powder.
	Machine has not been cleaned well.	Dismantle, clean by hand washing, completely air dry all parts and reassemble.
	Silicone Scraper is not installed correctly.	Make sure Silicone Scraper is installed correctly.
	Incorrect "Powder Setting" selected.	Go to babybrezza.co.uk/settings to confirm setting for your powder brand and type, then choose correct setting using the "Powder Setting" button on the Control Panel.
Not dispensing water.	Water Tank not fully seated.	Push Water Tank down all the way onto the Base.
Powder build-up on Funnel Cover and underside of Powder Container.	Frequent use without cleaning underside of Powder Container. See page 7 step 3 for details.	Clean Funnel, Funnel Cover and underside of Powder Container every 4 bottles.

* If you can not remedy problems by using the troubleshooting chart above, do not return your Formula Pro® Mini to the store. Please contact Baby Brezza Customer Service on 01730 895761, email help@cheekyrascals.co.uk, or visit babybrezza.co.uk for videos and assistance.